

ASCON spa
ISO 9001
Certified

ASCON spa
20021 Bollate
(Milano) Italy
via Falzarego, 9/11
Tel. +39 02 333 371
Fax +39 02 350 4243
<http://www.ascon.it>
e-mail sales@ascon.it

Process Controller with Setpoint Programmer

$\frac{1}{16}$ DIN - 48 x 48




M5 line

User Manual • M.I.U.M5-4/03.01 • Cod. J30-478-1AM5 IE



**Process Controller
with Setpoint
Programmer**
1/16 DIN - 48 x 48

M5 line

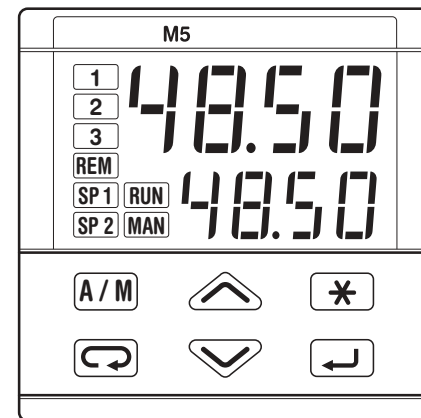



NOTES

ON ELECTRIC SAFETY AND ELECTROMAGNETIC COMPATIBILITY

Please, read carefully these instructions before proceeding with the installation of the controller.

Class II instrument, real panel mounting.

This controller has been designed with compliance to:

Regulations on electrical apparatus (appliance, systems and installations) according to the European Community directive 73/23/EEC amended by the European Community directive 93/68/EEC and the Regulations on the essential protection requirements in electrical apparatus EN61010-1 : 93 + A2:95.

Regulations on Electromagnetic Compatibility according to the European Community directive n089/336/EEC, amended by the European Community directive n° 92/31/EEC, 93/68/EEC, 98/13/EEC

and the following regulations:

Regulations on RF emissions

EN61000-6-4 : 2001 industrial environments

Regulation on RF immunity

EN61000-6-2 : 2001 industrial equipment and system

It is important to understand that it's responsibility of the installer to ensure the compliance of the regulations on safety requirements and EMC.

The device has no user serviceable parts and requires special equipment and specialised engineers. Therefore, a repair can be hardly carried on directly by the user. For this purpose, the manufacturer provides technical assistance and the repair service for its Customers.

Please, contact your nearest Agent for further information.

All the information and warnings about safety and electromagnetic compatibility are marked with the  CE sign, at the side of the note.

TABLE OF CONTENTS

1	INTRODUCTION	PAGE	4
1.1	PRODUCT CODING	PAGE	5
2	INSTALLATION	PAGE	6
2.1	DESCRIPTION	PAGE	6
2.2	OPERATING CONDITIONS	PAGE	7
2.3	INSTALLATION	PAGE	7
3	ELECTRICAL CONNECTIONS	PAGE	8
3.1	TERMINATION UNIT	PAGE	8
3.2	CABLING LAYOUT	PAGE	8
3.3	ELECTRICAL CONNECTIONS	PAGE	9
4	OPERATIONS	PAGE	15
4.1	FRONT PANEL	PAGE	15
4.2	CONFIGURATION	PAGE	16
4.3	PARAMETER SETTING	PAGE	20
4.4	ACCESS LEVELS	PAGE	27
5	DISPLAYS	PAGE	29
6	COMMANDS	PAGE	30
6.1	COMMANDS FROM KEYBOARD	PAGE	31
6.2	COMMANDS FROM DIGITAL INPUTS	PAGE	33
6.3	COMMANDS FROM SERIAL COMMUNICATION (PLEASE, REFER THE ADDENDUM ON THE SERIAL COMMUNICATION)		
7	SETPOINT PROGRAMMER (OPTIONAL)	PAGE	34
7.1	PROGRAM ORGANISATION	PAGE	34
7.2	OPERATING CONDITIONS	PAGE	36
7.3	PROGRAM INPUT AND EDITING	PAGE	37
7.4	RUN/STOP OF A PROGRAM	PAGE	38
8	TECHNICAL SPECIFICATIONS	PAGE	39

1 INTRODUCTION

Congratulations for having chosen these universal controllers. They are the best result of our experience in designing and manufacturing of smart, powerful and high reliable controllers.

POWERFUL FEATURES AND A WIDE RANGE OF FUNCTIONALITIES

The process controllers of the M5 series have been designed for the industrial environment, are provided with a complete set of functions, as a true universal instrument.

They can be used as Controllers-Programmers with 1 Setpoint profile of 16 segments.

6 TC

Pt100

ΔT

mA

V

Custom
2√

PV

¢

POT.

REM
mA

REM
V

AUX

IL1

IL2

Memory Chip
Data Copy/Data Store
(option)

M5

48.50

48.50

Modbus RS485
Parameterisation
Supervision
(option)

OP1

OP2

OP3

OP4
(option)

mA

V

Setpoint

LOC

2 MEM

REM

1x16s

Digital inputs (IL1, IL2) functions

2 MEM

REM

RUN

HOLD PV

SP
STORE

Tuning

One shot
Auto tuning

Adaptive

Operating mode



	Control	Alarms	Retransmission
	<div></div>	<div></div>	<div></div>
			PV/SP
1	Single action	OP1	OP2 OP3 OP4
2	Single action	OP4	OP1 OP2 OP3
3	Double action	OP1 OP2	OP3 OP4
4	Double action	OP1 OP4	OP2 OP3
5	Double action	OP4 OP2	OP1 OP3
6	Valve	OP1 OP2	OP3 OP4

4

1.1 PRODUCT CODING

The complete code is displayed on the instrument label.

The information about product coding are accessible from the front panel by mean of a particular procedure described at section 5.1 pag 29

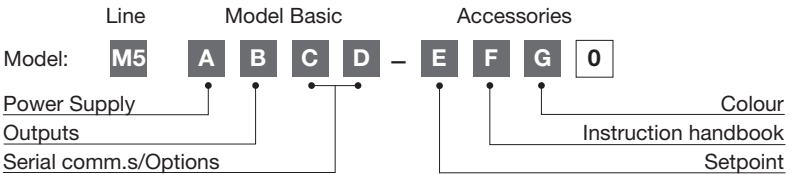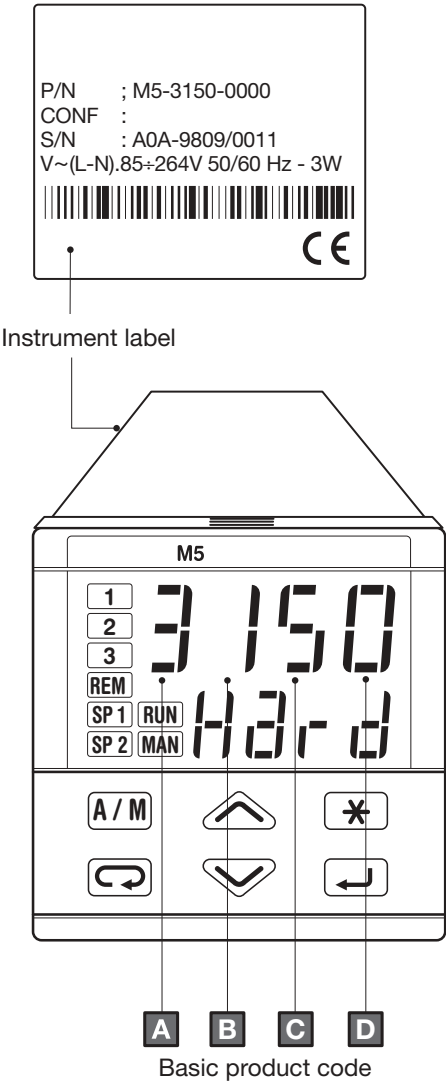

Power Supply	A
100 - 240V~ (- 15% + 10%)	3
24V~ (- 25% + 12%) or 24V- (- 15% + 25%)	5

Outputs OP1 (OP2)	B
Relay - Relay	1
Relay - Triac	2
Triac - Relay	4
Triac - Triac	5

Serial Comms.	Options	C	D
Not fitted	None [2]	0	0
	Auxiliary Input	0	1
	Feedback potentiometer [2]	0	1
	Remote Setpoint [1]	0	2
	Current Transformer	0	3
RS485 Modbus/Jbus protocol	Auxiliary Output	0	4
	SSR drive/analogue	0	4
	SSR drive/analogue + Remote Setpoint [1] [2]	0	5
	None [2]	5	0
	Auxiliary Input	5	1
	Feedback potentiometer [2]	5	1
	Remote Setpoint [1]	5	2
	Current Transformer	5	3
	SSR drive/analogue auxiliary output	5	3
		5	4

[1] Not available with Setpoint programmer installed (E = 1)

[2] Second digital input (IL2) not available


Setpoint Programmer	E
Not fitted	0
Fitted	1

Front panel Colour	G
Dark (std)	0
Beige	1

Instruction handbook	F
Italian-English (std)	0
French-English	1
German-English	2
Spanish-English	3

2 INSTALLATION


Installation must only be carried out by qualified personnel.

Before proceeding with the installation of this controller, follow the instructions illustrated in this manual and, particularly the installation precautions marked with the  symbol, related to the European Community directive on electrical protection and electromagnetic compatibility.




To prevent hands or metal touching parts that may be electrically live, the controllers must be installed in an enclosure and/or in a cubicle.


2.1 INSTALLATION DESCRIPTION

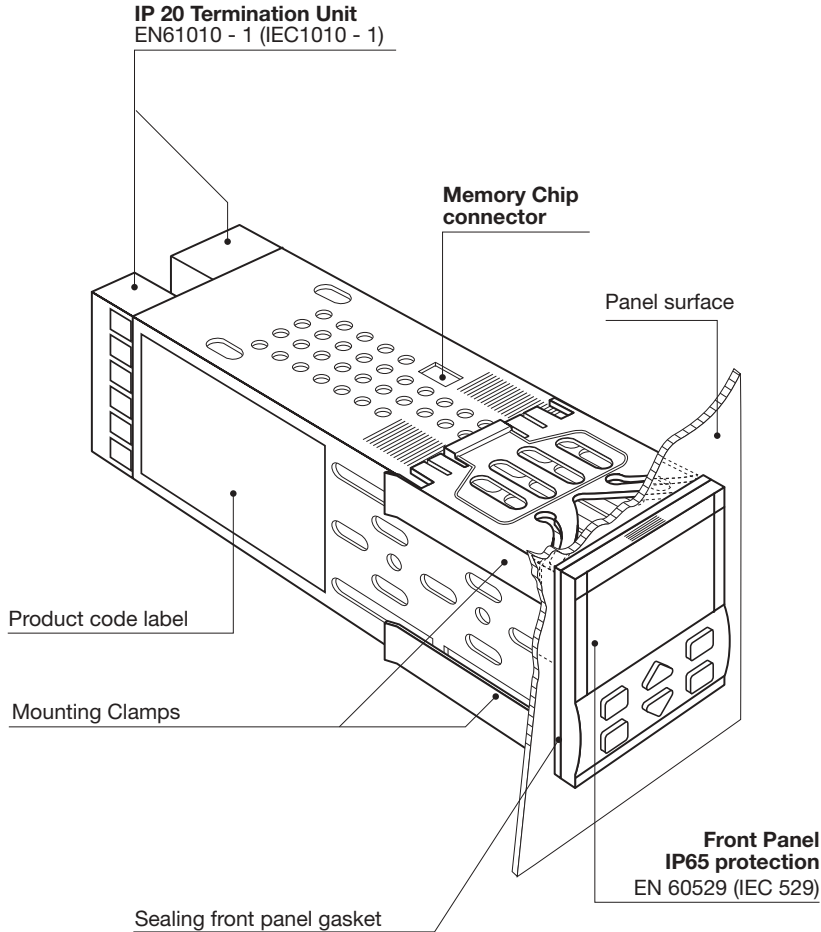

2.1.1 DIMENSIONAL DETAILS

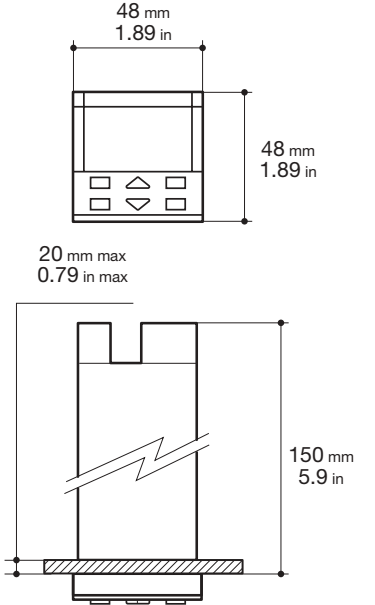

2.1.2 PANEL CUT-OUT

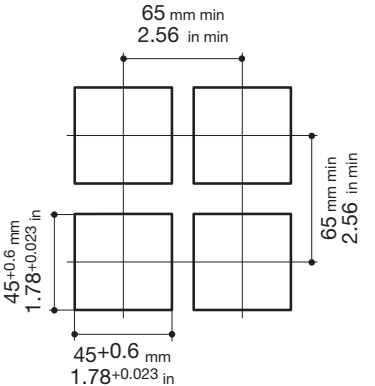

2.2 ENVIRONMENTAL RATINGS



Operating Conditions

	Altitude up to 2000 m
	Temperature 0...50°C
%Rh	Relative Humidity 5...95 %Rh non-condensing

Special Conditions

	Altitude > 2000 m	Use 24V~ supply version
	Temperature >50°C	Use forced air ventilation
%Rh	Humidity > 95 %Rh	Warm up
	Conducting atmosphere	Use filters

Forbidden Conditions

	Corrosive atmosphere
	Explosive atmosphere


UL note

[1] For Use on a Flat Surface of a Type 2 and Type 3 'raintight' Enclosure.

2.3 PANEL MOUNTING [1]


2.3.1 INSERT THE INSTRUMENT

- 1 Prepare panel cut-out
- 2 Check front panel gasket position
- 3 Insert the instrument through the cut-out

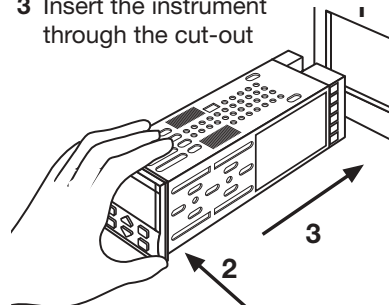


2.3.2 INSTALLATION SECURING

- 1 Fit the mounting clamps
- 2 Push the mounting clamps towards the panel surface to secure the instrument

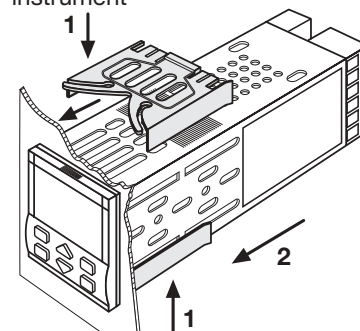

2.3.3 CLAMPS REMOVING


- 1 Insert the screwdriver in the clips of the clamps
- 2 Rotate the screwdriver

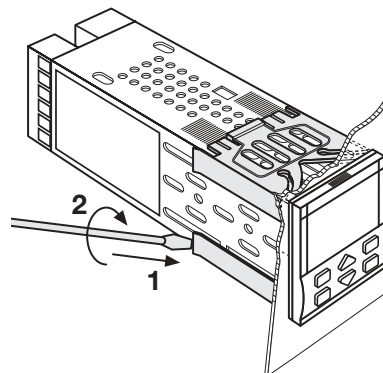

2.3.4 INSTRUMENT UNPLUGGING



- 1 Push and
 - 2 Pull to remove the instrument
- Electrostatic discharges can damage the instrument
Before removing the instrument the operator must discharge himself to ground

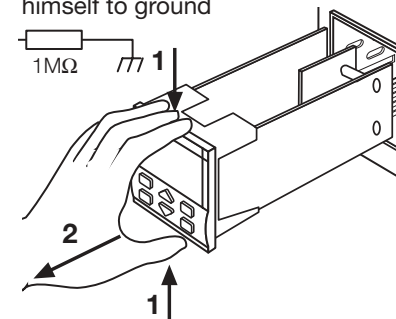

3 ELECTRICAL CONNECTIONS

PRECAUTIONS



Despite the fact that the instrument has been designed to work in an harsh and noisy environmental (level IV of the industrial standard IEC 801-4), it is strongly recommended to follow the following suggestions.



All the wiring must comply with the local regulations.

The supply wiring should be routed away from the power cables.

Avoid to use electromagnetic contactors, power relays and high power motors nearby.

Avoid power units nearby, especially if controlled in phase angle


Keep the low level sensor input wires away from the power lines and the output cables.

If this is not achievable, use shielded cables on the sensor input, with the shield connected to earth.

UL note

[1] Use 60/70 °C copper (Cu) conductor only.

3.1 TERMINATION UNIT [1]

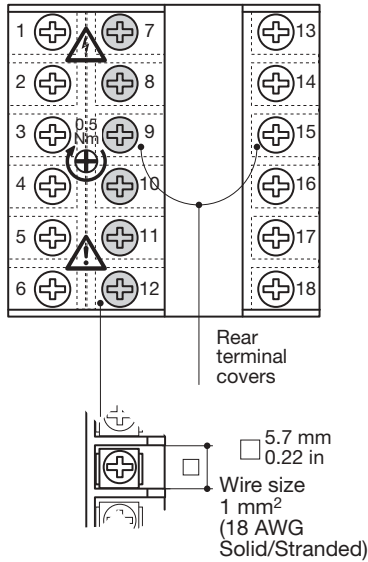

18 screw terminals



Option terminals



Holding screw 0.5 Nm

 


Positive screw driver PH1



Negative screw driver 0,8 x 4 mm

Terminals



Pin connector \varnothing 1.4 mm
0.055 in max




Fork-shape AMP 165004
 \varnothing 5.5 mm - 0.21 in




Stripped wire
L 5.5 mm - 0.21 in

3.2 RECOMMENDED ROUTING OF WIRES

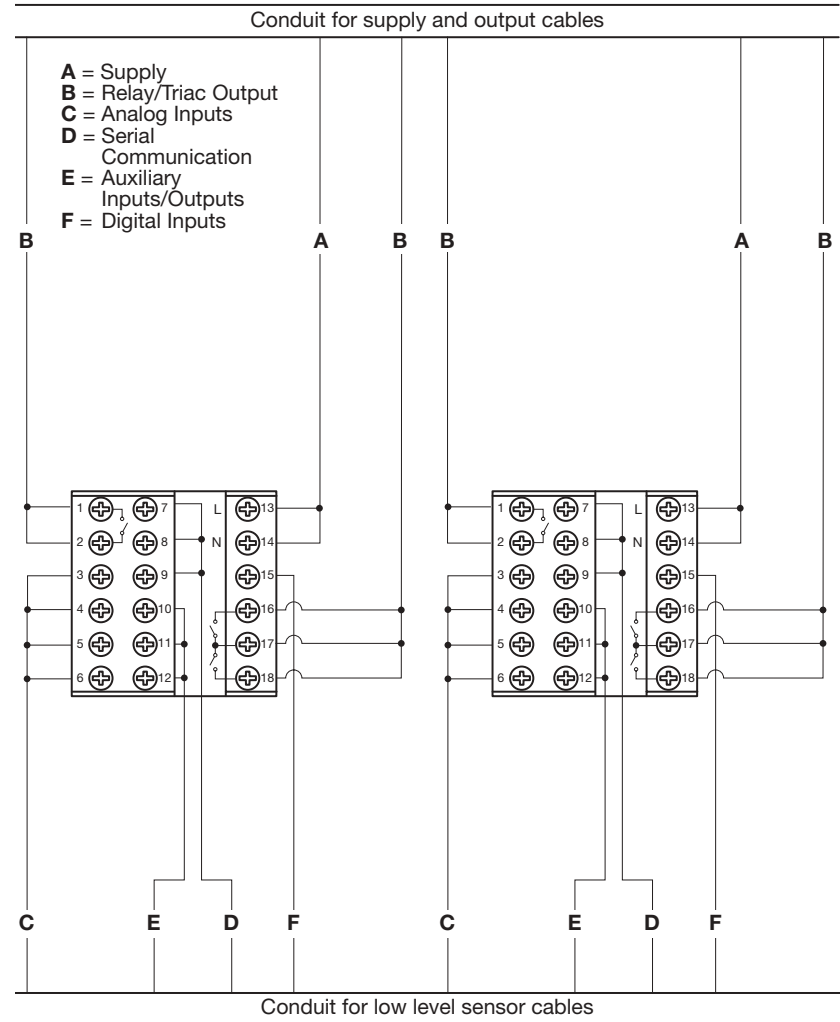




3.3 TYPICAL INSTRUMENT WIRING (valve control)

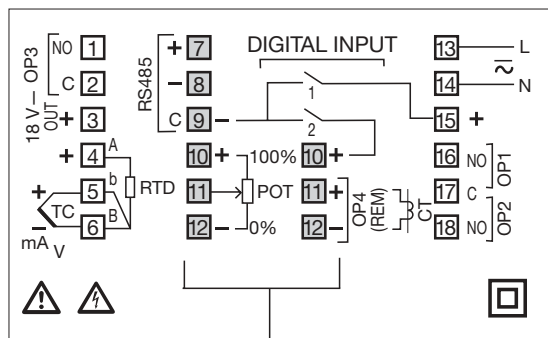

Supervisory

 


RS485

Notes:


- 1] Make sure that the power supply voltage is the same indicated on the instrument.
- 2] Switch on the power supply only after that all the electrical connections have been completed.
- 3] In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument. The power supply switch shall be easily accessible from the operator.

- 4] The instrument is PTC protected. In case of failure it is suggested to return the instrument to the manufacturer for repair.
- 5] To protect the instrument internal circuits use:
 - 2 A ~ T fuses for Relay outputs
 - 1 A ~ T fuses for Triac outputs
- 6] Relay contacts are already protected with varistors.

Only in case of 24 V ~ inductive loads, use model A51-065-30D7 varistors (on request)

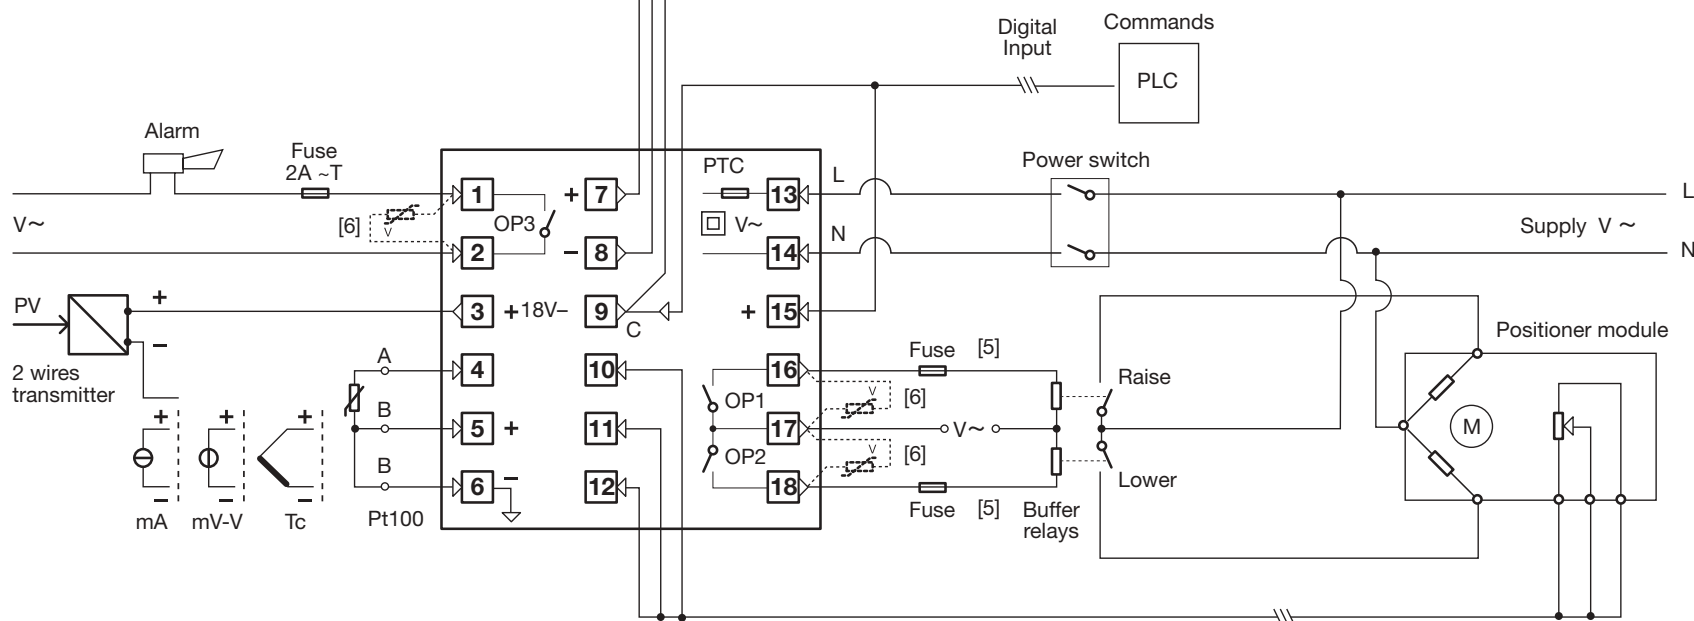



3.3.1 POWER SUPPLY

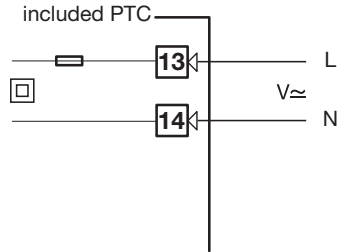


Switching power supply with multiple isolation and internal fuse

- **Standard version:**
nominal voltage:
100 - 240V~ (-15% + 10%)
Frequency 50/60Hz
- **Low Voltage version:**
Nominal voltage:
24V~ (-25% + 12%)
Frequency 50/60Hz
or 24V- (-15% + 25%)
- Power consumption 3Wmax

3.3.2 PV CONTROL INPUT

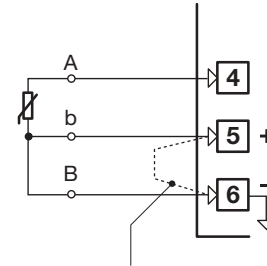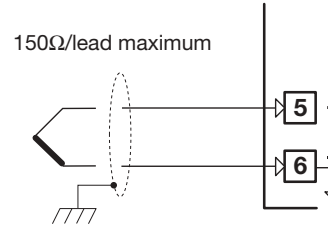

When using a 2 wire system, put a jumper between terminals 5 and 6

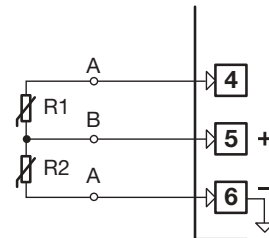**A For JLT KSR thermocouple type**

- Use always compensation cable of the correct type for the thermocouple used
- Use always compensation cable of the correct type for the thermocouple used
- The shield, if present, must be connected to a proper earth.

B For PT100 resistance thermometer

- If a 3 wire system is used, use always cables of the same diameter (1mm² min).
Maximum resistance/line 20 Ω
- If a 2 wire system is used, use always cables of the same diameter (1.5mm² min).


⚠ When the distance between the controller and the sensor is 15 meters, using a cable of 1.5mm² diameter, produces an error in the measure of 1°C .

B1 For ΔT (2x Pt100)

- Use wires of the same length.
Maximum resistance/line 20 Ω.

R1 + R2 must be <320Ω

3.3.2 PV CONTROL INPUTS (cont.)

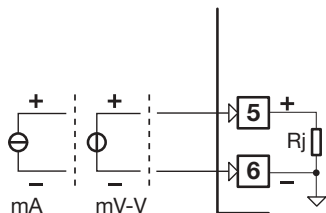


C For DC input

Input resistance = 30Ω for mA


Input resistance = $10\text{M}\Omega$ for mV

Input resistance = $10\text{K}\Omega$ for Volt

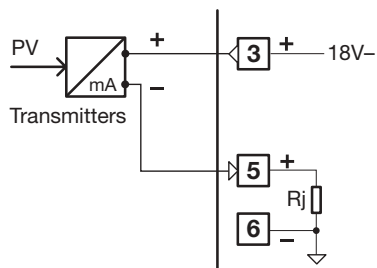

C1 For 2 wires transmitters


- Power supply to the transmitter
18V- $\pm 10\%$
30mA max
Input resistance = 30Ω

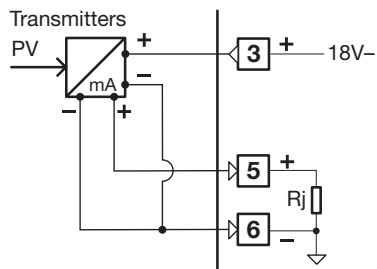

C2 For 3 or 4 wires transmitters


- Power supply to the transmitter
18V- $\pm 10\%$
30mA max
Input resistance = 30Ω

3.3.3 AUXILIARY INPUTS (OPTION)

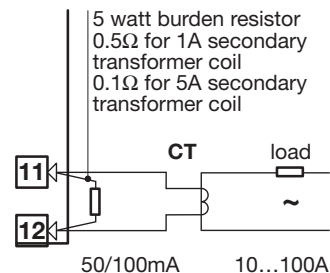

A For current transformer CT
for the measure of the load current



- Primary coil 10A...100A
- Secondary coil 50 mA default
100mA jumper selectable

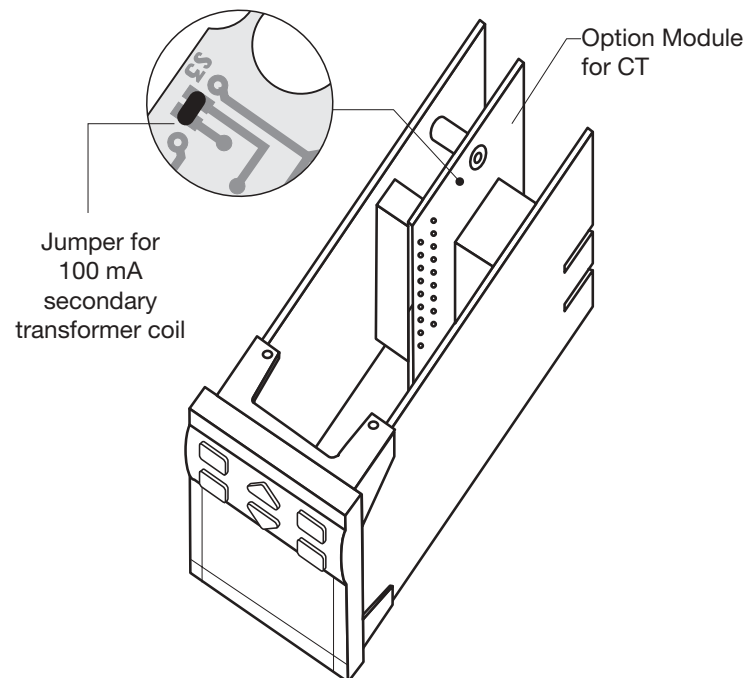

3.3.3 AUXILIARY INPUTS (cont.)



⚠ If the analogue input is provided, the terminals for the Remote Setpoint are 10(+) and 9(-)

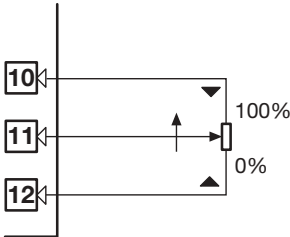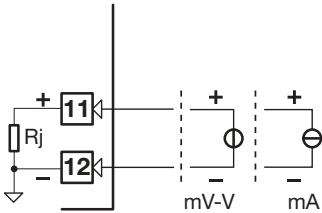


B From Remote Setpoint

Current
0/4...20mA
Input resistance = 30Ω


Voltage
1...5V, 0...5V, 0...10V
Input resistance = 300KΩ

C From Position Potentiometer

To read the real position of the motor or the valve

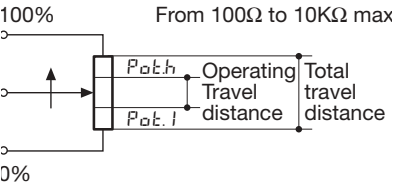

3.3.4 DIGITAL INPUTS

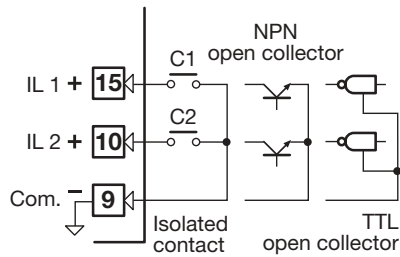

- The associated function is active when the digital input is ON (see table on page 33)
- The second digital input (IL2) is available only with the following options:
Remote Setpoint (D = 2)
Current transformer (D = 3)
SSR drive / analogue output (D = 4)

3.3.5 OP1 OP2 OP3 AND OP4 OUTPUTS



The functionality associated to each of the OP1 OP2 OP3 and OP4 outputs is defined during the configuration of the instrument.

The possible choices are:


		Control		Alarms			Retransm. PV-SP
1	Single action	OP1 Heat			OP2	OP3	OP4-C
2	Single action	OP4 Heat		OP1	OP2	OP3	
3	Double action	OP1 Heat	OP2 Cool			OP3	OP4-C
4	Double action	OP1 Heat	OP4 [1] Cool		OP2 [2]	OP3	
5	Double action	OP4 [1] Heat	OP2 Cool	OP1 [2]		OP3	
6	Valve	OP1 Raise	OP2 Lower			OP3	OP4-C

where:







OP1 - OP2	Relay or Triac output
OP3	Relay output
OP4	Analogue or SSR drive output
OP4-C	Analogue output

Note


- [1] In case of OP4 analogue output, its status is not visualised by any red led
- [2] When the OP4 SSR drive output is selected, the status of OP1 and OP2, as alarms, is not displayed by any red led

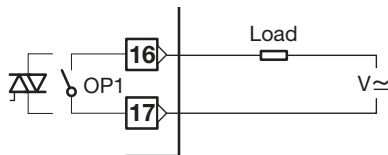3.3.5-A SINGLE RELAY**OUTPUT (TRIAC)**


1 NO contact

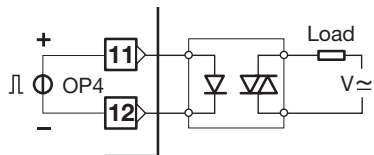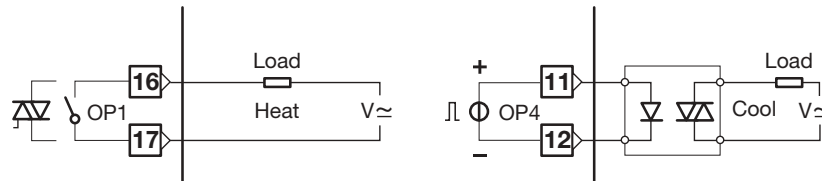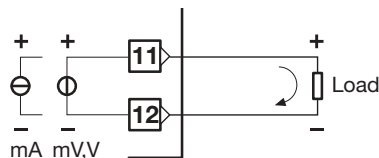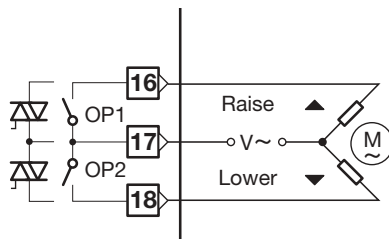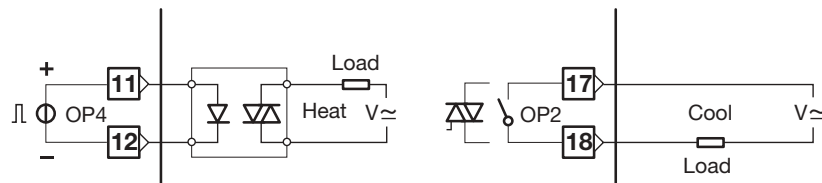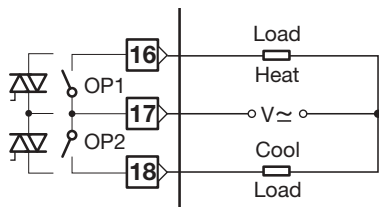3.3.5-B SINGLE SSR DRIVE**OUTPUT (OPTION)**Output 0...22V~ ±20% (20mA max)
galvanic isolated**3.3.5-F HEAT COOL OUTPUT RELAY (TRIAC)/SSR DRIVE (OPTION)****3.3.5-C SINGLE ANALOGUE****OUTPUT (OPTION)**galvanic isolated
500 V~/ 1min
750Ω / 15V max if current output
500Ω / 20mA max if voltage output**3.3.5-D VALVE OUTPUT**3 pole output with NO contacts
(raise, lower, stop)**3.3.5-G HEAT COOL OUTPUT SSR DRIVE (OPTION)/RELAY (TRIAC)****3.3.5-E HEAT COOL OUTPUT RELAY/RELAY (TRIAC/TRIAC)**


2 NO contacts

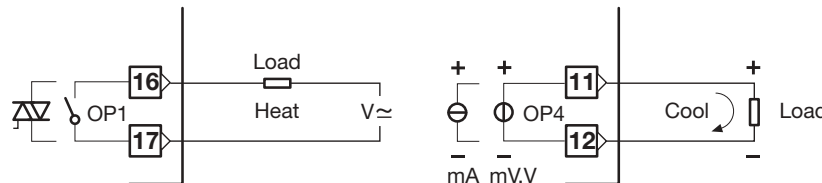3.3.5-H HEAT COOL OUTPUT RELAY (TRIAC)/ANALOGUE (OPTION)

3.3.5-I HEAT COOL OUTPUT DC (OPTION)/RELAY (TRIAC)

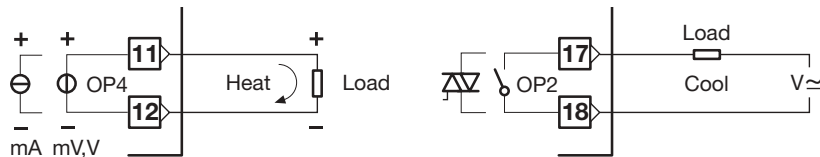


3.3.7 RETRANSMISSION OUTPUT (OPTION)

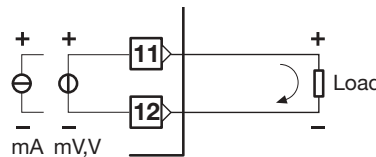


galvanic isolated
500 V~ / 1min
750Ω / 15V max if current output
500Ω / 20mA max if voltage output
⚠ The analogue/SSR drive output OP4 can be used for signal retransmission only if it is not used as control output.

3.3.6 ALARM OUTPUTS OP1, OP2, OP3

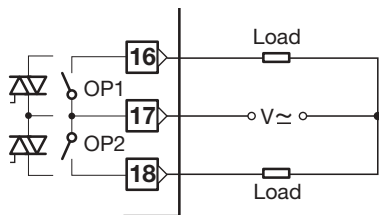


⚠ The relay/triac output OP1, OP2 and OP3, can be used as alarm outputs only if they are not used as control outputs.

2 NO contacts

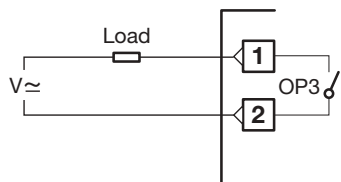

1 NO contact


3.3.8 SERIAL COMMUNICATION (OPTION)

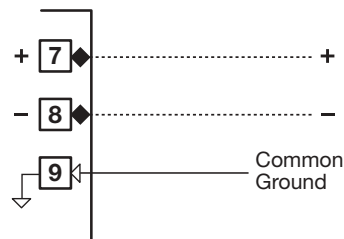


- Galvanic isolation 500V~/1 min
Compliance to the EIA RS485 standard for Modbus/Jbus
- ⚠ Please, read: gamma^{due}® and delta^{due}® controller series serial communication and configuration**

4 OPERATION

4.1.A KEYS FUNCTION AND DISPLAY IN OPERATOR MODE

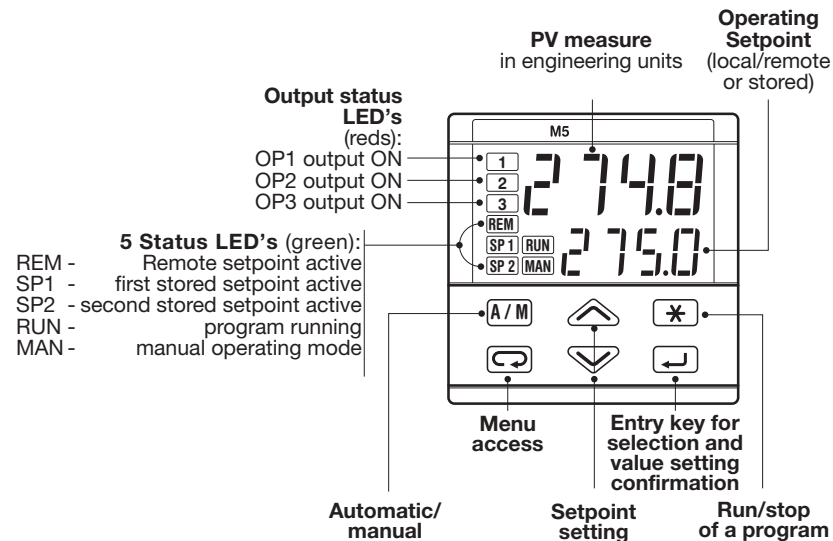




4.1.B KEYS FUNCTION AND DISPLAY IN PROGRAMMING MODE

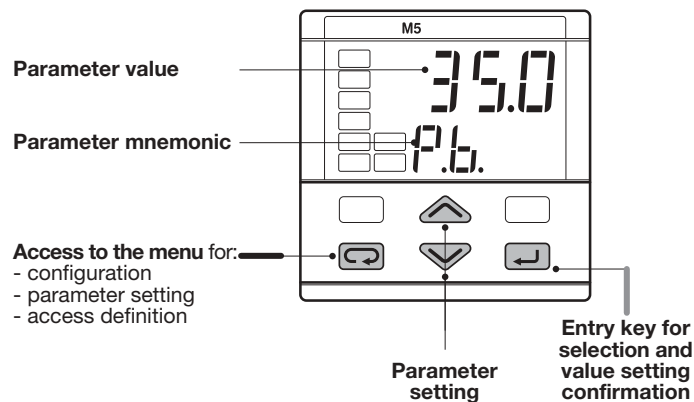

4.1.1 NUMERIC ENTRY

(i.e. the modification of the value of a stored Setpoint from 275.0 to 240.0)

 Press \triangle or ∇ momentarily to change the value of 1 unit every push. Continued pressing of \triangle or ∇ changes the value, at rate that doubles every second. Releasing the button the rate of change decreases. In any case the change of the value stops when it has reached the max/min limit set for the parameter.

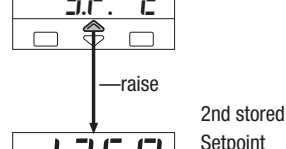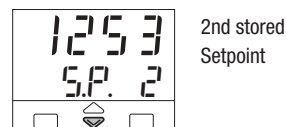


The new value is entered when the next parameter is selected by mean of the \rightarrow key.


4.1.2 MNEMONIC SETTING

(Way to modified configuration page 16 / 18)

Press the \triangle or ∇ to display the next or previous mnemonic for the selected parameter. Continued pressing of \triangle or ∇ will display further mnemonics at a rate of one mnemonic every 0.5 seconds. The mnemonic displayed at the time the next parameter is selected, is the one stored in the parameter.

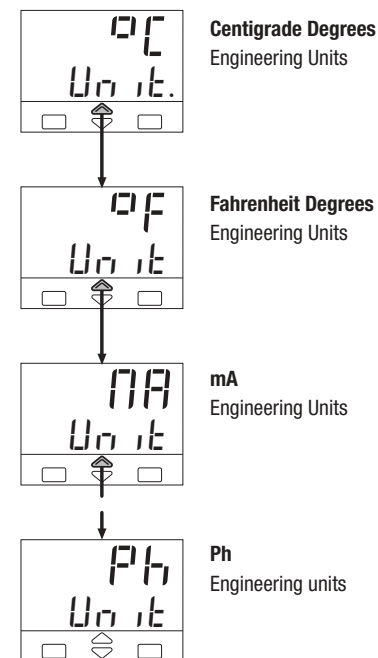


4.2 CONFIGURATION PROCEDURE

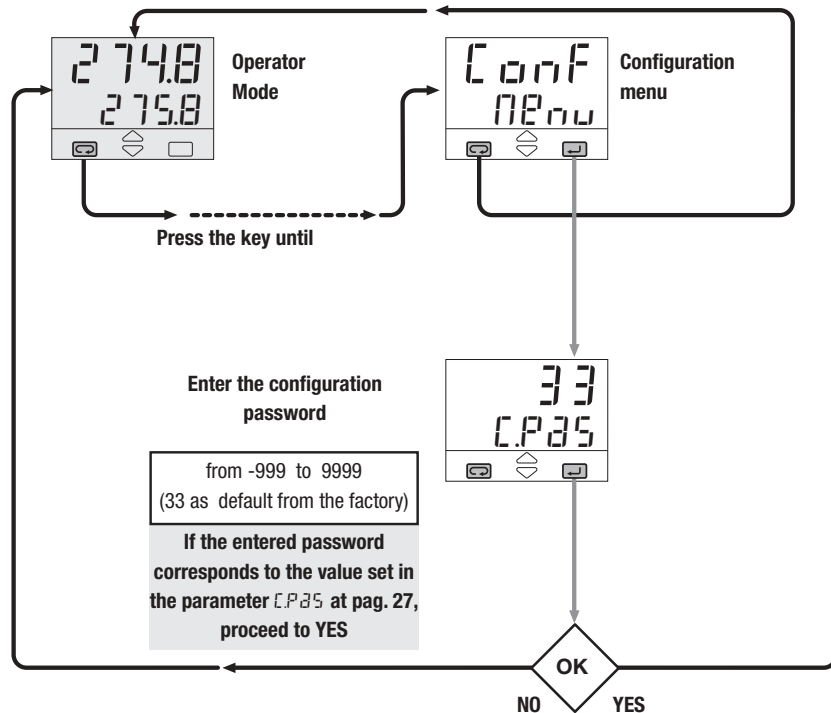

If the configured hardware option is not installed, the display shows an hardware error message



100	Analog output not installed
101	Current transformer not installed
102	Remote Setpoint input not installed
103	Potentiometer input not installed
104	Analogue output + Remote Setpoint not installed

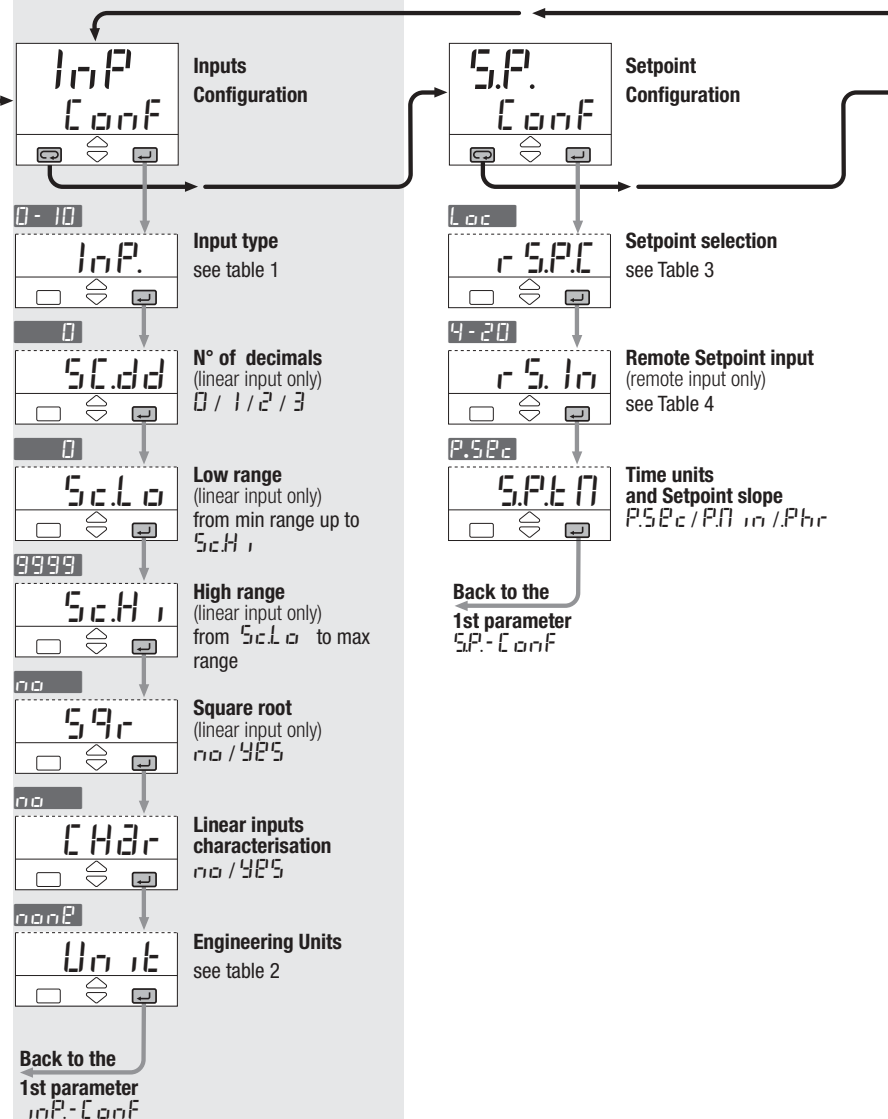

CONFIGURATION MENU



Output Configuration

 
Pidr

Type of Control
see Table 5


OFF

Heat control output
see Table 6

OFF

Control output
safety value
OFF / -100...100%

 none

Retransmission output
(available for DC output
only)
none / PU / SP.

4-20

Retransmission output
type
(available for DC output only)
see Table 4


0

Retransmission
low range
whole range

9999


Retransmission
high range
whole range

OFF

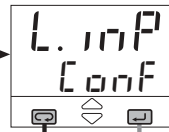
Cool control output
see Table 7

Digital inputs configuration

 OFF

IL1 function
see Table 8

 OFF

IL2 function
see Table 8Back to the
1st parameter of
L.inP-Conf

Alarm s configuration

OFF

AL1 alarm type
see Table 9

OFF

AL1 addressing
(not available when AL1 is
OFF)
OP1/OP2/OP3

no

AL1 latching
(not available when AL1 is
OFF)
no / YES

no

AL1 start-up disabling
(not available when AL1 is
OFF)
no / YES

OFF

AL2 alarm type
see Table 9

OP1

AL2 addressing
(not available when AL2 is
OFF)
OP1/OP2/OP3


no

AL2 latching
(not available when AL2 is
OFF)
no / YES

no

AL2 start-up disabling
(not available when AL2 is
OFF)
no / YESAL3 alarm type
see Table 9AL3 addressing
(not available when AL3 is
OFF)
OP1/OP2/OP3AL3 latching
(not available when AL3 is
OFF)
no / YESAL3 start-up disabling
(not available when AL3 is
OFF)
no / YESAL4 alarm type
see Table 9AL4 addressing
(not available when AL4 is
OFF)
OP1/OP2/OP3AL4 latching
(not available when AL4 is
OFF)
no / YESAL4 start-up disabling
(not available when AL4 is
OFF)
no / YES

Back to the 1st parameter of Out-Conf

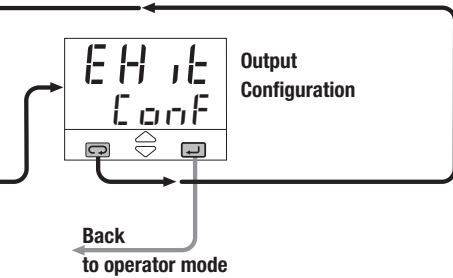

Tab. 1 Input type		
Value	Description	InP.
tc. d	0...600°C	32...1112°F
tc. L	0...600°C	32...1112°F
tc. P	0...1200°C	32...2192°F
tc. S	0...1600°C	32...2912°F
tc. r	0...1600°C	32...2912°F
tc. t	-200...400°C	-328...752°F
cusE	Custom range on request	
ret d1	-200...600°C	-328...1112°F
ret d2	-99.9...300.0°C	-99.9...572.0°F
dPLt	-50.0...50.0°C	-58.0...122.0°F
NU	0...50 mV	Engineering units
0-5	0...5 Volt	
1-5	1...5 Volt	
0-10	0...10 Volt	
0-20	0...20 mA	
4-20	4...20 mA	

Tab. 2 Engineering units		
Value	Description	Unit
none	None	
°C	Centigrade Degrees	
°F	Fahrenheit Degrees	
mA	mA	
mV	mV	
V	Volt	
bar	bar	
PSI	PSI	
Rh	Rh	
Ph	Ph	

Tab. 3 Setpoint type		
Value	Description	rSP.
Loc	Local only	
rem	Remote only	
L-r	Local/remote only	
Loc.t	Local - trim	
rem.t	Remote - trim	

Tab. 4 Rem. Setpoint Retransmission		
Value	Description	rs.in
0-5	0...5 Volt	0.rty
1-5	1...5 Volt	
0-10	0...10 Volt	
0-20	0...20 mA	
4-20	4...20 mA	


Tab. 5 Control type		
Value	Description	0.ty
OF.rP	Reverse action	On - Off
OF.d	Direct action	
Pidd	Direct action	P.I.D.
Pidr	Reverse action	
Udir	Direct action	Modulating valves
UrPU	Reverse action	
HCLn	Linear	Heat/Cool
HCOL	Oil charac.	
HCH2	Water charac.	

Tab. 6 Heat control output		
Value	Description	HCO.P
OFF	Not used	
r1	Relay 1	Digital signal
Lo9	SSR drive	
0-5	0...5 Volt	Analogue signal
1-5	1...5 Volt	
0-10	0...10 Volt	
0-20	0...20 mA	
4-20	4...20 mA	

Tab. 7 Cool control output		
Value	Description	CCOP
OFF	not used	
r2	relay 2	Digital signal
Lo9	SSR drive	
0-5	0...5 Volt	Analogue signal
1-5	1...5 Volt	
0-10	0...10 Volt	
0-20	0...20 mA	
4-20	4...20 mA	

Tab. 8 Digital Inputs function		
Value	Description	IL1
OFF	Not used	IL2
L-r	Local/remote	
Auto	Auto/manual	
SP1	1st stored Setpoint	
SP2	2nd stored Setpoint	
PEB1	Keypad	
SLa.1	SP. slope disable	
HPU	Measure hold	
r-H	Run/stop of a program	

Tab. 9 Alarm type			
Value	Description	AL1	AL2
OFF	Not used	AL3	AL4
FSH	Active high	Absolute	
FSL	Active low		
DEUH	Active high	Deviation	
DEUL	Active low		
band	Out active	Band	
Htr	Active high	Heater Break	
Lb3	Loop break alarm (AI1 only)		

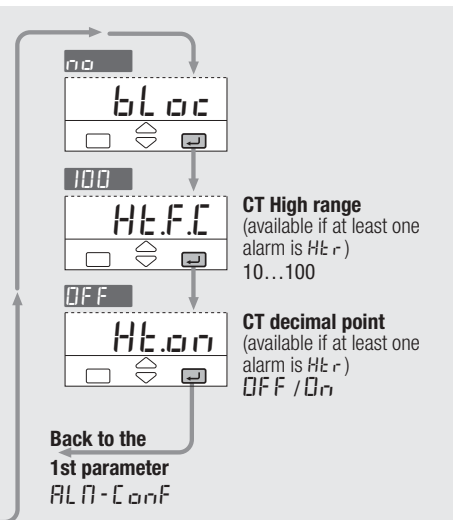

4.2.1 AL1, AL2, AL3, AL4 ALARMS CONFIGURATION

It is possible to configure up to 4 alarms: AL1, AL2, AL3, AL4 (see pag. 17), selecting, for each of them:

- A** the type and the operating condition of the alarm
(table 9 page 18)
- B** the functionality of the alarm acknowledgement (latching) **[L t c h]**
- C** the start-up disabling (blocking) **[b l o c]**
- D** the physical output of the alarm
[OP1] [OP2] [OP3]


The outputs can be used for alarms if they are not used as control outputs (see par. 3.3.5 page12)

It is possible to route up to 4 alarm to a single output (OR of the alarms).

Alarm occurrence display

This function can be enabled by the configuration software.
(please read the user instruction on the "M5 LINE MODBUS /JBUS PROTOCOL", supplied separately)

The type of alarm is presented flashing, on the front panel in alternation with the PV value.

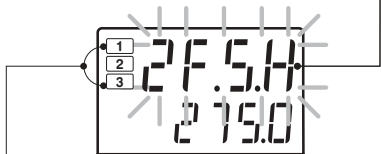


The red led of the activated alarm output is on.


The range of the alarm threshold correspond to the whole span and it is not limited by the SP Setpoint span.

[A] OPERATING CONDITIONS


Absolute alarm

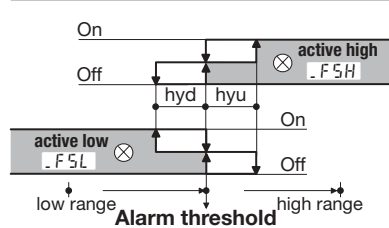

Deviation alarm

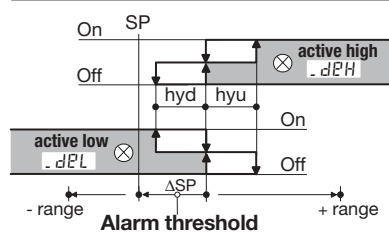

Band alarm

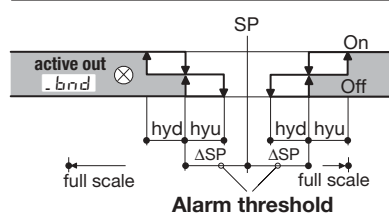




[B] ALARM ACKNOWLEDGE FUNCTION

The alarm, once occurred, is presented on the display until to the time of acknowledge. The acknowledge operation consists in pressing any key.



After this operation, the alarm leaves the alarm state only when the alarm condition is no longer present.

[C] START-UP DISABLING

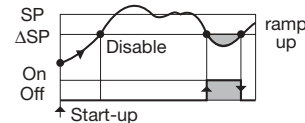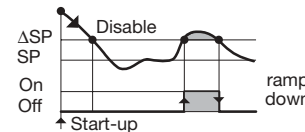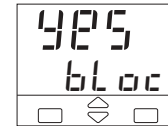


ΔSP
Threshold =
 $SP \pm range$

[D] LOOP BREAK ALARM LBA


When the controller connection to the sensor is discontinued or other faults are detected in the control loop, the AL1 alarm becomes active, after a predefined time of 1 to 9999 s, from the detection of the failure.

The alarm state ceases when the fault condition is no longer present.



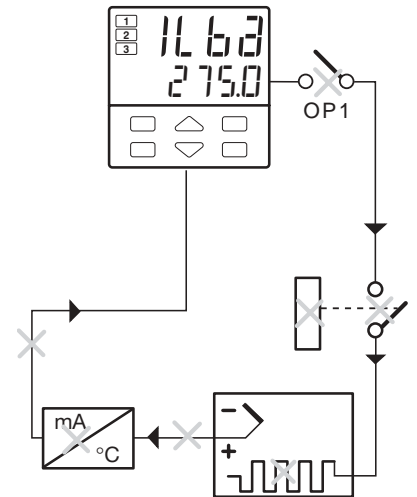


⚠ In case of ON-OFF control, the LBA alarm is not active.

4.3 PARAMETER SETTING

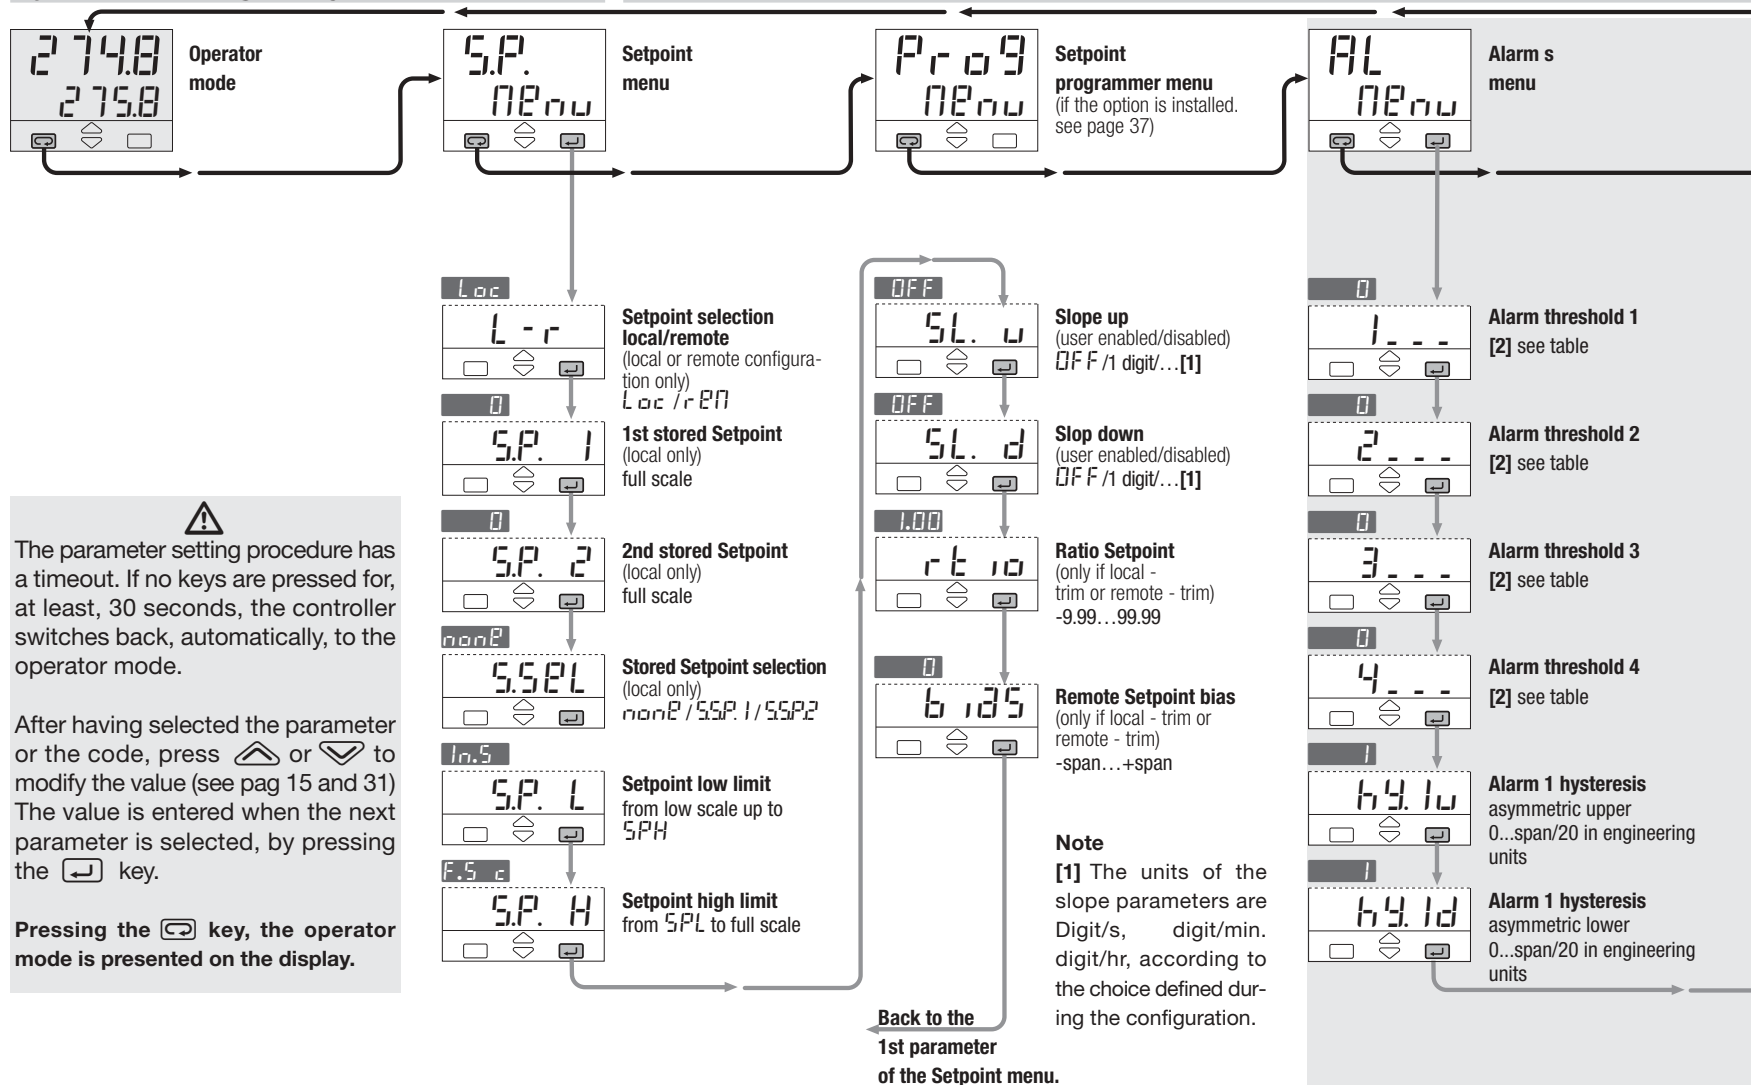

PARAMETER MENU

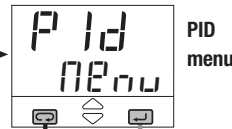
 
 
PID
menu**Proportional band**
(PID algorithm only)
0.1...999.9 % of span**Integral time**
(user enabled/disabled)
(PID algorithm only)
OFF / 1...9999 seconds


Note [2] A code, specifying the n° and the alarm type that has been configured, is displayed. At this point, the user must enter the threshold value, according to the following table.

Type and value	Mode	N° and Param.
Absolute	Active high	-F5H
	Active low	-F5L
Deviation	Active high	-dPH
	Active low	-dPL
Band full scale	Active out of band	-bnd
Load Threshold 1...100A 0.1...20A	Active high	-Htr
		-Htr
AL1 activation delay 1...9999 s	Active high	ILb2

**Derivative time**
(user enabled/disabled)
(PID algorithm only)
OFF / 0.1...999.9 seconds**Error dead band**
OFF / 0.1...10.0 digit**Overshoot control**
(user enabled/disabled)
(PID algorithm only)
0.01...1.00**Manual reset**
(user enabled/disabled)
(PID algorithm only)
OFF / 1...100% output**Proportional band Cool channel**
(Heat/Cool configuration only)
0.1...999.9% full scale**Cool Integral time**
(user enabled/disabled)
(Heat/Cool configuration only)
OFF / 1...9999 seconds**Cool Derivative time**
(user enabled/disabled)
(Heat/Cool configuration only)
OFF / 0.1...999.9 secondsBack to the
1st parameter of the PID menuTuning
menu**Initial Tune start**
(one shot tune)
no/YES**Continuous Tune start**
(adaptive tune)
(not available with set PrCh)
no/YES.**Calculated Proportional band [3]** (display only)
(available when adaptive tune is selected)**Calculated Integral time [3]** (display only)
(available when adaptive tune is selected)**Calculated derivative time [3]** (display only)
(available when adaptive tune is selected)**Nota [3]**

   These values are not automatically stored on the PID menu parameters P.b., t.i., t.d.

Back to the
1st parameter
of the Tuning menu.**Alarm 2 hysteresis asymmetric upper**
0...span/20 in engineering units**Alarm 2 hysteresis asymmetric lower**
0...span/20 in engineering units**Alarm 3 hysteresis asymmetric upper**
0...span/20 in engineering units**Alarm 3 hysteresis asymmetric lower**
0...span/20 in engineering units**Alarm 4 hysteresis asymmetric upper**
0...span/20 in engineering units**Alarm 4 hysteresis asymmetric lower**
0...span/20 in engineering unitsBack to the
1st parameter
of the Alarms menu.

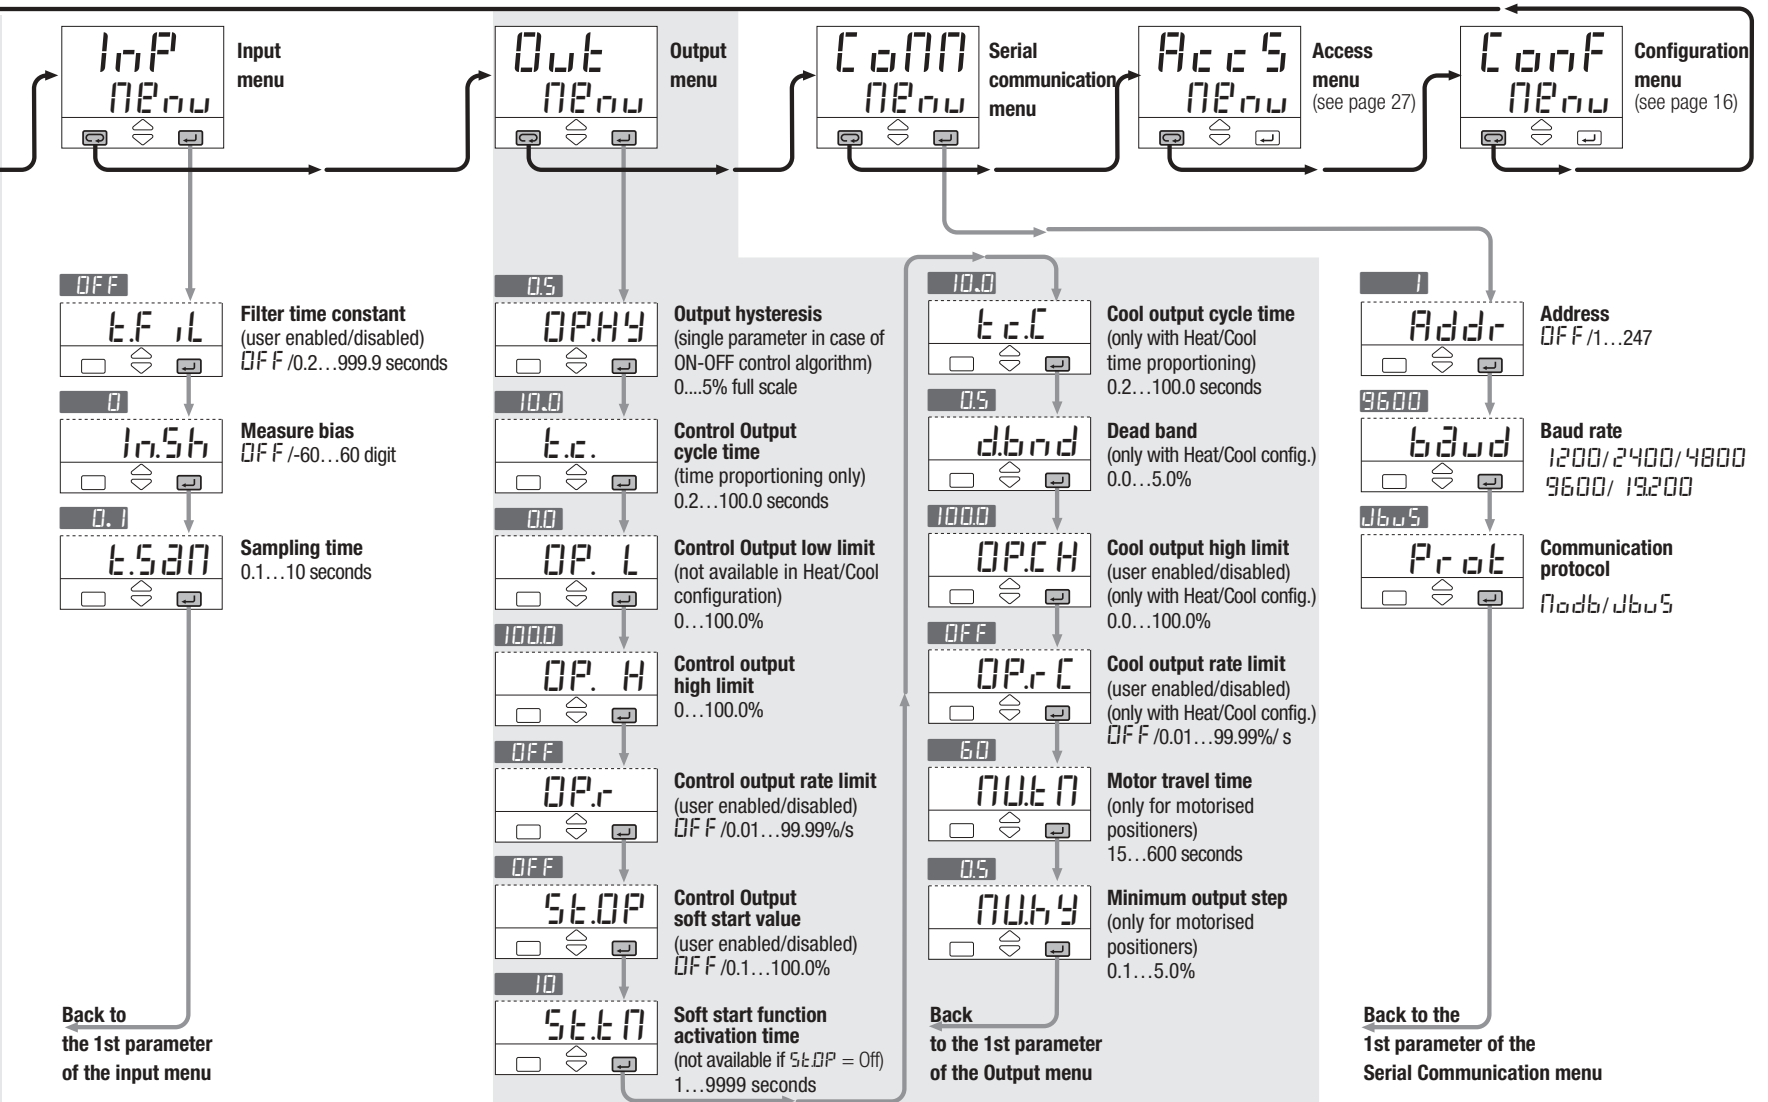

4.3.1 PARAMETERS

The controller parameters have been organised in group, according to their functionality area.

SETPOINT MENU

SP. 1

1st stored Setpoint

SP. 2

2nd stored Setpoint

Values of the two Setpoints, that are activated by mean of digital inputs, communication parameters, and keyboard. The Setpoint active is indicated by the **SP1** or **SP2** green led.

SP. L

Setpoint low limit

SP. H

Setpoint high limit

High and low limit of the Setpoint SP. The minimum span (SP 1-SP2) must be greater than 100 digit.

SL. u

Setpoint ramp up

SL. d

Setpoint ramp down

This parameter specifies the maximum rate of change of the Setpoint. Its units are: digit/s, digit/min and digit/hour.

When the parameter is **OFF**, this function is disabled and the new Setpoint value is reached immediately after being entered (through the keyboard, the digital inputs and the serial communication). Otherwise, the

value entered is reached according to the configured rate of change.

rt 10

Remote Setpoint Ratio


This parameter defines the maximum span of the Remote Setpoint.

b 135

Remote Setpoint Bias

It defines the low range of the Remote Setpoint, in engineering units.

Remote Setpoint Bias and Ratio

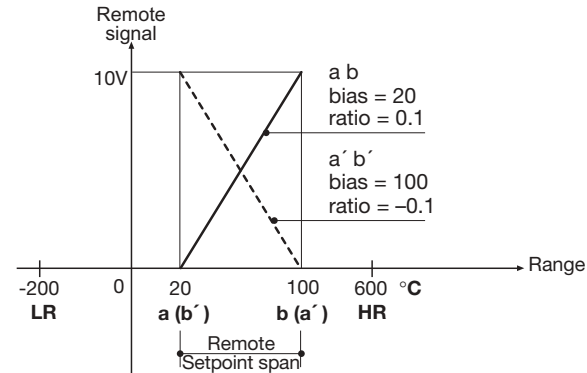

PV = Process variable
 LR = PV low limit
 HR = PV high limit
 SR = Remote Setpoint
 a (a') = SR starting point
 b (b') = SR ending point

If SR starting point is **lower** then the ending point, both expressed in engineering units:

b_{SDS} = starting point = a

$$r_{\text{LO}} = \frac{b - a}{HR - LR}$$

Example:

$b_{\text{SDS}} = 20$

$$r_{\text{LO}} = \frac{100 - 20}{600 - (-200)} = \frac{80}{800} = 0.1$$

If SR starting point is **higher** then the ending point, both expressed in engineering units

b_{SDS} = starting point = a'

$$r_{\text{LO}} = \frac{b' - a'}{HR - LR}$$

Example:

$b_{\text{SDS}} = 100$

$$r_{\text{LO}} = \frac{20 - 100}{600 - (-200)} = \frac{-80}{800} = -0.1$$

Working Setpoint (SP) as combination of Local Setpoint (SL) and remote signal

Setpoint type L_{OCL}

(table 3, page 18)

$$SP = SL + (r_{\text{LO}} \cdot REM) + b_{\text{SDS}}$$

Setpoint type r_{ENL}

(table 3, page 18)

$$SP = REM + (r_{\text{LO}} \cdot SL) + b_{\text{SDS}}$$

SIGN = Remote signal percentage

SPAN = HR-LR

$$REM = \frac{SIGN \cdot SPAN}{100}$$

Examples:

Local Setpoint (SL) with an external Trim with multiplying coeff. of 1/10:

Setpoint type = L_{OCL}

$r_{\text{LO}} = 0.1$

$b_{\text{SDS}} = 0$

Remote Setpoint (SR) with an internal Trim with multiplying coeff. of 1/5:

Setpoint type = r_{ENL}

$r_{\text{LO}} = 0.2$

$b_{\text{SDS}} = 0$

Remote Setpoint range equal to the Input range:

Setpoint type = L_{OCL}

$r_{\text{LO}} = 1$

$b_{\text{SDS}} = LR$

$SL = 0$

ALARM MENU

(see page 19)

PID MENU

P.b.

Proportional Band

P.b. [

Cool Proportional Band

This parameter specifies the proportional band coefficient that multiplies the error (SP - PV)

[. I.

Integral Time

[. I. [

Cool integral Time

It is the integral time value, that specifies the time required by the integral term to generate an output equivalent to the proportional term
When OFF the integral term is not included in the control algorithm.

[. d.

Derivative Time

[. d. [

Cool Derivative Time

It is the derivative term coefficient that specifies the time required by the proportional term P to reach the level of D.
When OFF the derivative term is not included in the control algorithm.

4.3.1 PARAMETERS (cont.)

0.0

Overshoot control

(Automatically disabled when the adaptive tune is running)
This parameter specifies the span of action of the overshoot control. Setting lower values ($1 \rightarrow 0.01$) the overshoot generated by a Setpoint change is reduced. The overshoot control doesn't affect the effectiveness of the PID algorithm. Setting 1, the overshoot control is disabled.

0.25

Manual reset

This term specifies the value of the control output when $PV = SP$, in a PD only algorithm (lack of the Integral term).


TUNING

Two tuning method are provided:

- Initial one shoot **Autotuning**
- Continuous, self learning **Adaptive Tuning**

When the **Autotuning** is started, the controller generates a rapid burst of ON - OFF transition and monitors the response, in order to calculate the optimal PID terms parameters. Once calculated the terms values are immediately used in the control algorithm. (a minimum error of 5% of span is needed to start the Autotuning)

One shot initial autotuning

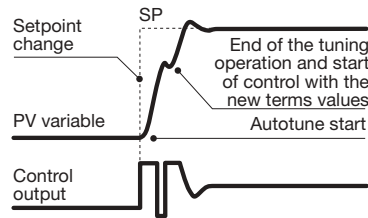


The self-learning **adaptive autotune**, is not intrusive. It doesn't affect the process, at all, during the phase of calculation of the optimal terms parameters.

It is particularly suitable for controlling process whose control characteristics change with time or are not linear in relation to the Setpoint values.

It doesn't require any operation by the user. It is simple and works fine: it samples continuously the process response to the various perturbations, determining the frequency and the amplitude of the signals. On the basis of this data and their statistical values, stored in the instrument, it modifies automatically the PID term parameters.

It is the ideal for all applications where it is required to change continuously the PID terms parameters, in order to adjust the PID to the changes of the process dynamic conditions.

 Continuous adaptive tune



In case of power off with the Adaptive Tune enabled, the values of the PID terms parameters are stored, in order to be reused at the next power on.

At power on the Adaptive Tune starts automatically.


INPUT MENU

6.5

Input filter

Time constant, in seconds, of the RC input filter on the PV input. When this parameter is **OFF** the filter is bypassed.

Filter response

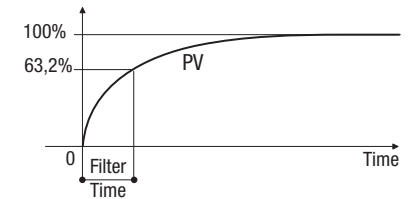

17.56


Measure Bias

This value is added to the measured PV input value. Its effect is to shift the whole PV scale of its value (± 60 digits).

6.520

Sampling Time

Sampling time, in seconds, of the instrument. This parameter is normally used when controlling slow process, increasing the sampling time from 0.1 to 10 seconds.

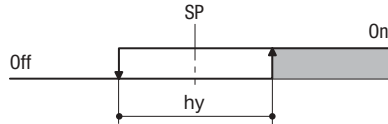OUTPUT MENU**OP.hY** Control output hysteresis

Control output hysteresis span, hy, set in % of the full scale.

t.c. Control output cycle time**t.c. t** Cool cycle time

It's the cycle time of the time proportioning control output. The PID control output is provided by the pulse width modulation of the waveform.

OP. L Control Output low limit

It specifies the minimum value of the control output signal. It is applied in manual mode, too.

OP. H Control output high limit**OP.C.H** Cool output high limit

It specifies the maximum value the control output can be set. It is applied in manual mode, too.

OP.r Heat output maximum rate**OP.r t** Cool output maximum rate


This value, specified in %/seconds, with range from 0.01 to 99.99%/s provides the maximum rate of change of the output. When set to 0FF this function is disabled.

StOP Soft start of the control output


It specifies the value at which the control output is set during the start up phase.

St.t Soft start time

This value specifies the time the start up phase lasts. The start up phase starts at power up of the controller.

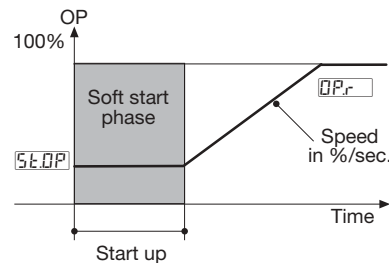**d.bnd** Heat/Cool deadband

This parameter specifies the width of the deadband between the Cool and the Heat channel

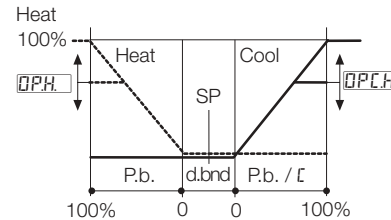Heat / Cool algorithm

..... Heat output
— Cool output

tr.t Travel time

It provides the time required to the motor positioner to go from the 0% position to 100%

tr.hY Minimum step

It specifies the minimum allowed time of activation of the output to a motor positioner that produces a sensible effect. It is related to the deadband of the positioner

SERIAL COMMUNICATION MENU**Addr** Controller address

The address range is from 1 to 247 and must be unique for each controller on the communication bus to the supervisor. When set to 0FF the controller is not communicating

b.dud Baud rate

It provides the baud rate in the range from 1200 to 19.200 bit/s.

Prot Communication protocol

Modb/rtu5

This Slave protocol allows the supervisor to read and write (when it is possible) all the parameters of the controller.


ACCESS MENU

(see page 27)

CONFIGURATION MENU

(see page 16)

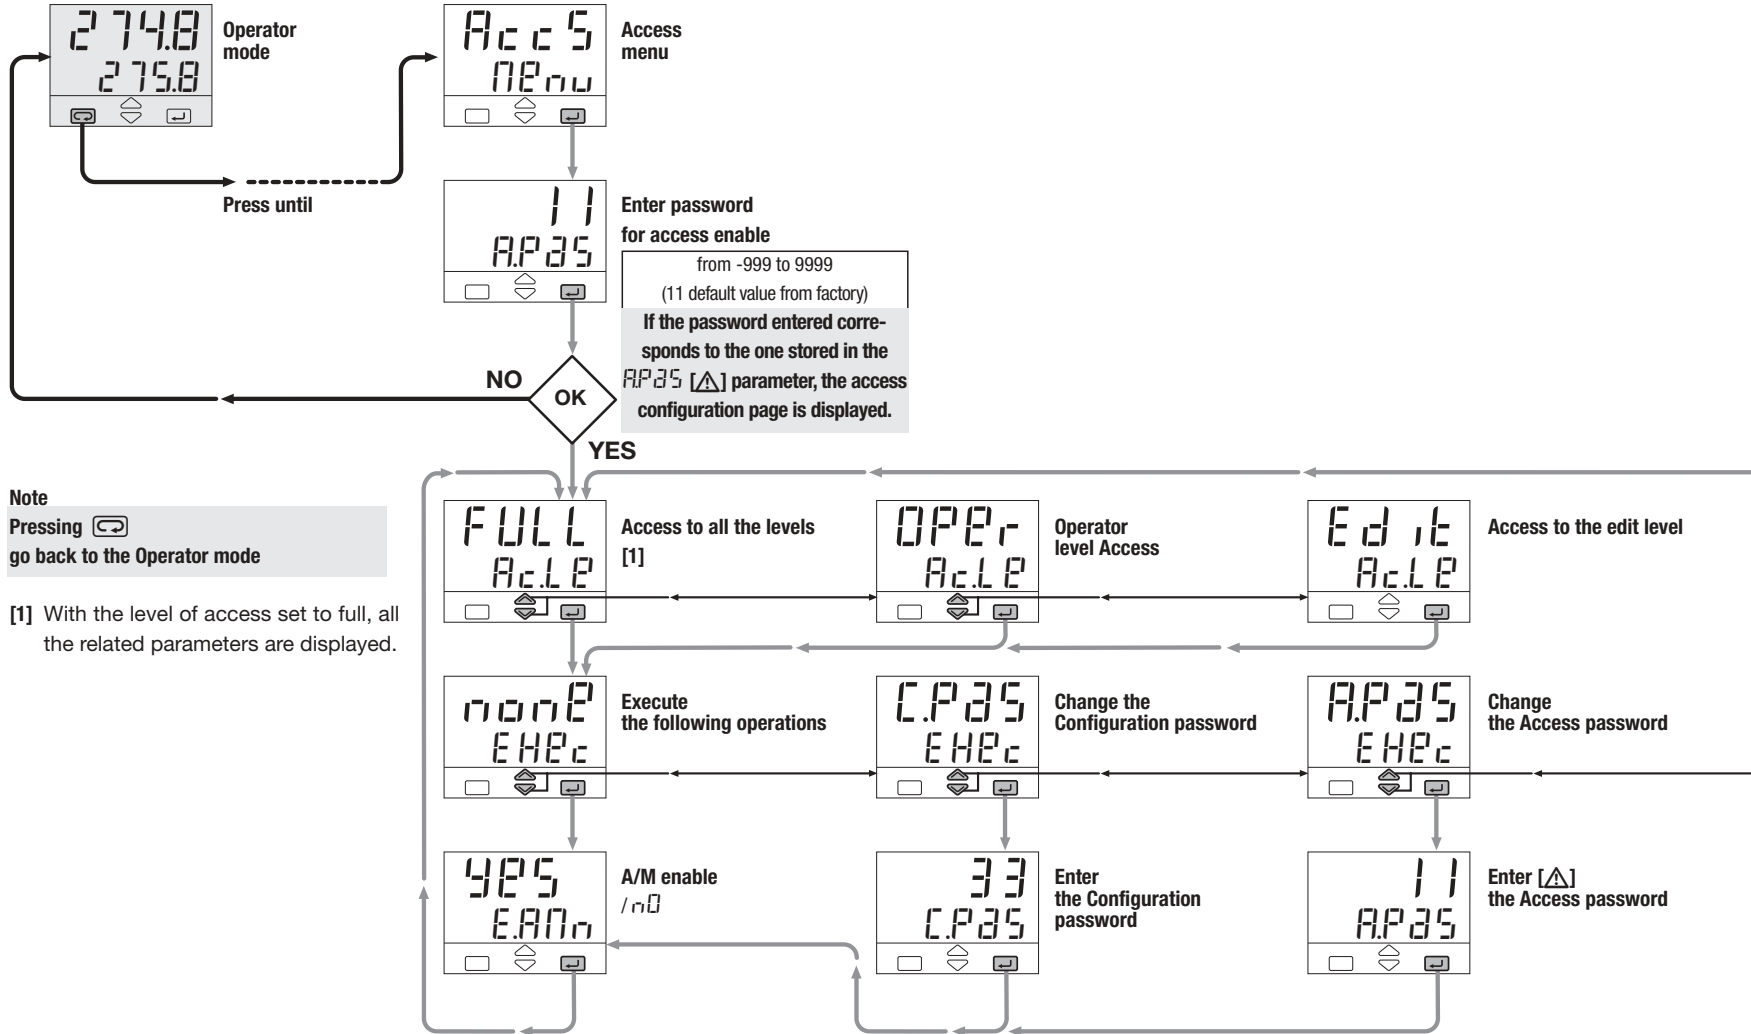

4.4 ACCESS LEVEL - PASSWORD - CALIBRATION





4.4 ACCESS LEVELS PASSWORD CALIBRATION

With the access level Edit, the user defines which groups and parameters are accessible to the operator

After selecting and confirming the access level Edit, enter in the parameters menu. The code of the access level is displayed on the front panel.

Press the  and  keys to select the proper level.


Group of parameters	Code	Access level
	rEd	Visible
	HidE	Not visible

Parameters	Code	Access level
	AlEr	Visible and changeable
	FaSt	Included in "Fast view"
	rEd	Visible only
	HidE	Not visible and not changeable

The parameters in the access level *FaSt* are recalled on the front panel through the procedure of fast parameter access illustrated in par. 5.2 pag 29. The maximum number of fast parameters is 10.

At the end of the parameter list of the selected group, the controller quits from the Edit access level. **Therefore, the Edit level must be selected for each group of parameters**


The access level of groups and parameters, is activated through

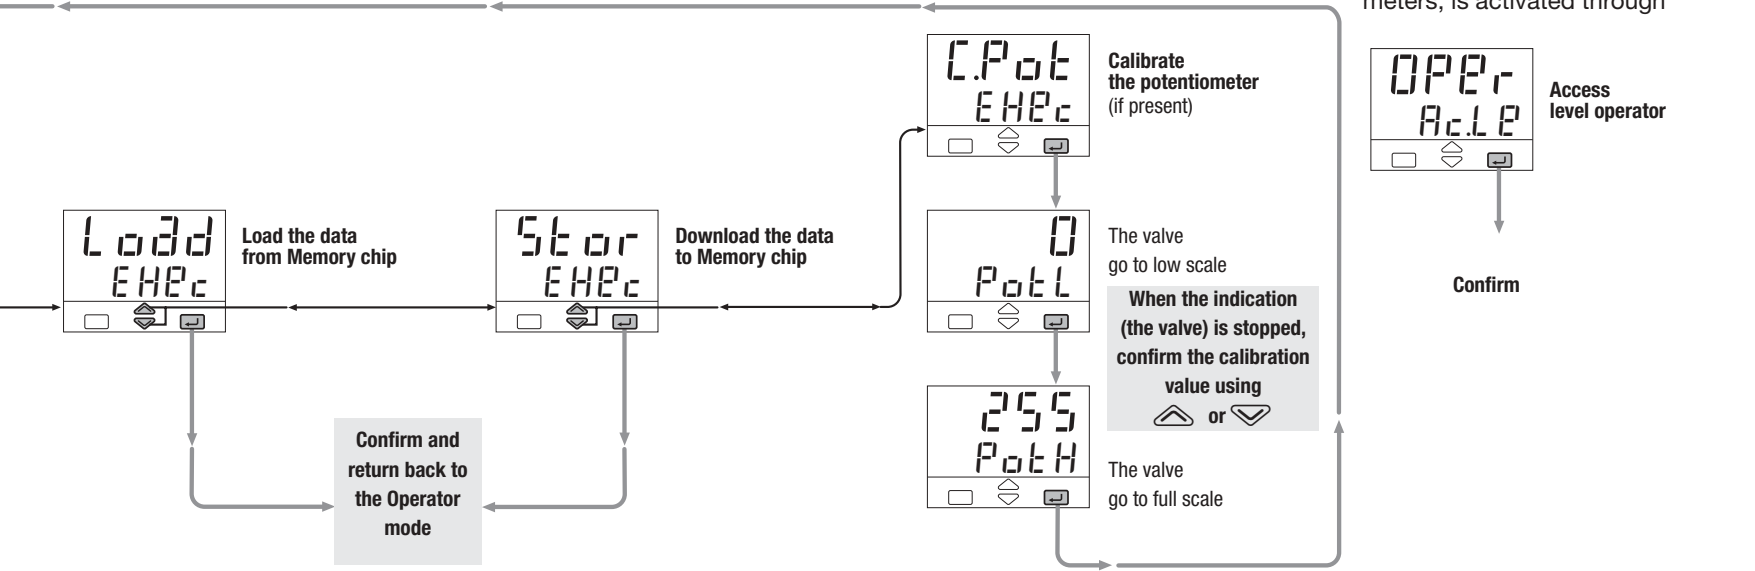

5.1 STANDARD DISPLAY



Example of common parameters
included in the fast view (fast access)

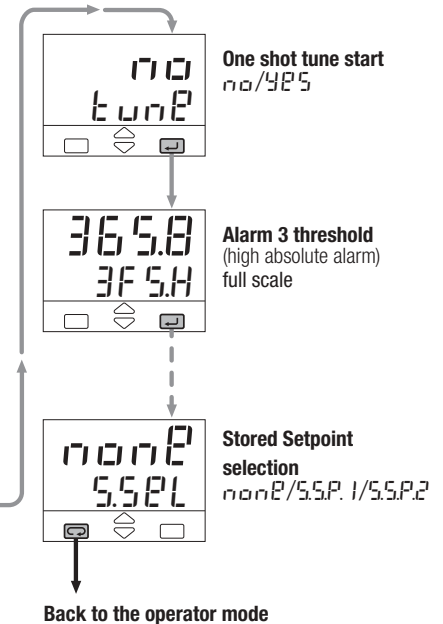

COMMANDS

COMMANDS TO THE CONTROLLER AND OPERATING PHASES

The commands can be entered
in 3 ways:




6.1 KEYBOARD

- Setpoint modification (page 31)
- local/remote selection (page 31)
- stored Setpoint display (page 31)
- manual mode (page 32)
- tuning start (page 32)
- programmer stop (page 38)

6.2 DIGITAL INPUTS

see page 33

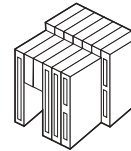

6.3 SERIAL COMMUNICATIONS

see the manual on this topic




6.1 KEYBOARD COMMANDS


A. SETPOINT MODIFICATION

The Setpoint is directly modified with the \triangle ∇ keys.

Once entered, the new value is checked and becomes operating after 2 seconds. The end of this phase is flagged by flashing momentarily the display with SP.

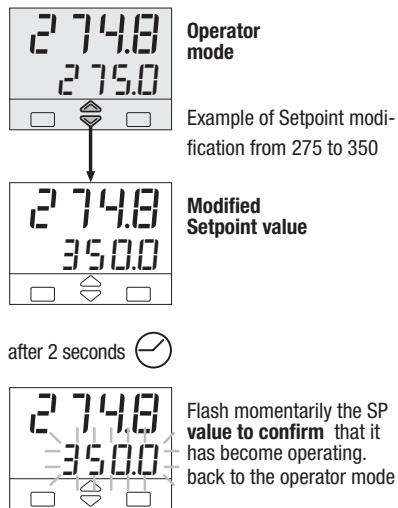


B. LOCAL/REMOTE

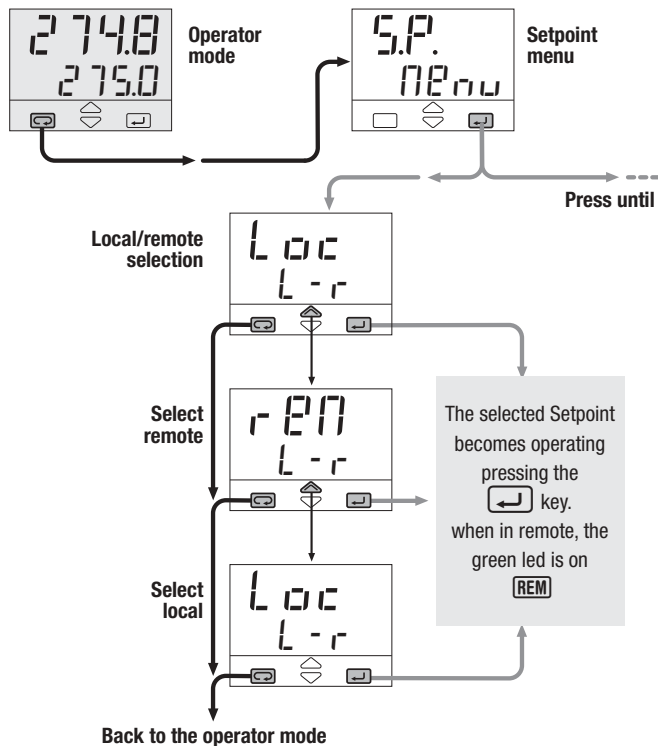

C. STORED SETPOINTS SELECTION


The Setpoint is directly modified with the \triangle ∇ keys. Once entered, the new value is checked and becomes operating after 2 seconds. This phase is flagged by flashing momentarily the display with SP.

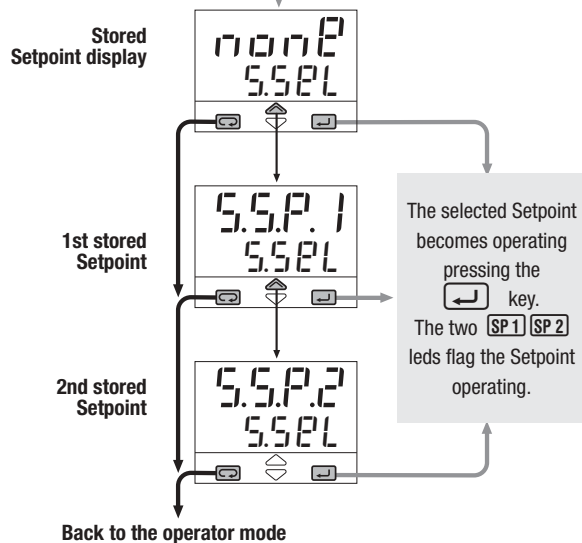



Note: When the Setpoint value is changed, the entered value is reached with a maximum rate set by the ramp up SL_u and ramp down, SL_d parameter. This applies to all the models and in all the operating modes.

It is suggested to set SL_u and SL_d to OFF when the remote Setpoint is operating. The entered Setpoint is defined as target Setpoint. It is displayed in the function menu at the parameter $L - S.P.$

If the slope parameter is set to zero the Setpoint variation occurs instantaneously.

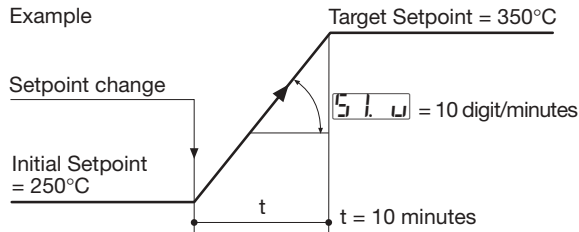


6.1.2 AUTO/MANUAL MODE

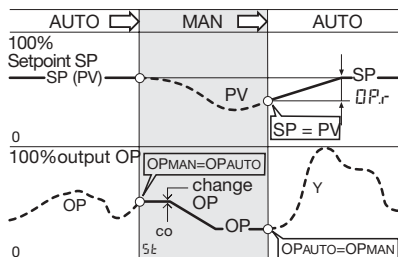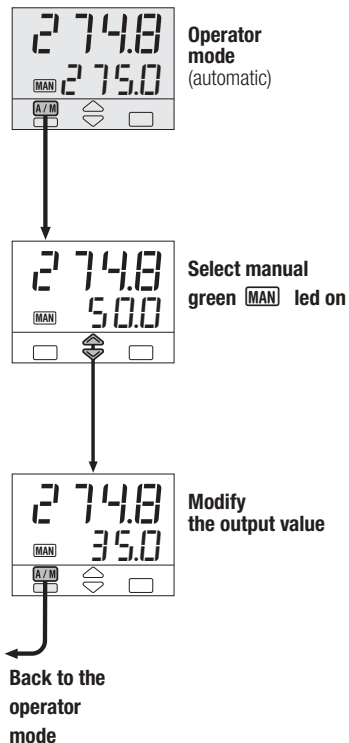

6.1.3 TUNING





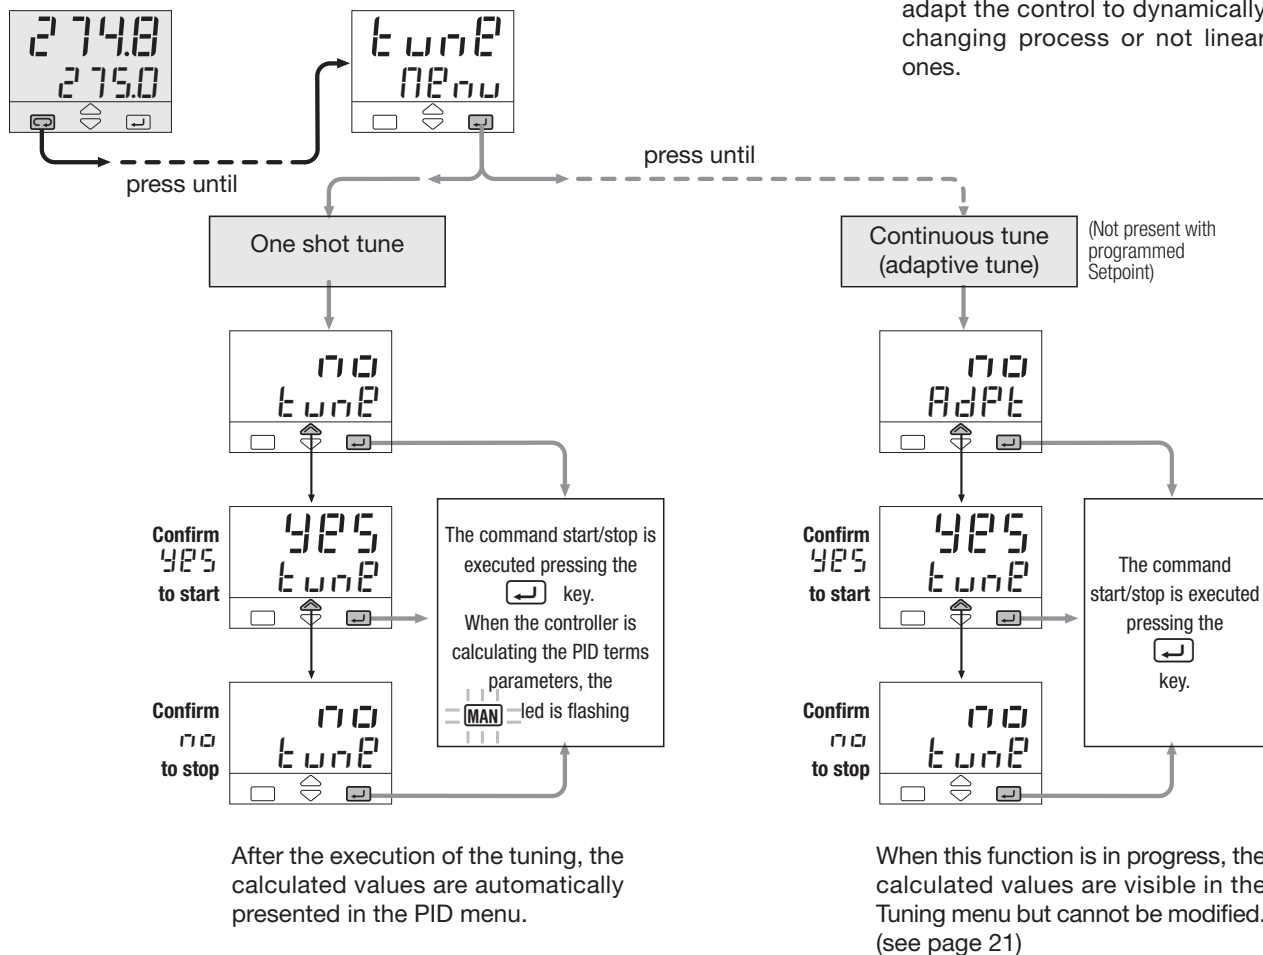






This controller is provided with 2 different Tuning algorithm

- One shot tune for calculating the optimal PID terms parameters.
- Continuous tuning (adaptive tune) for a continuous calculation of the PID terms parameters in order to adapt the control to dynamically changing process or not linear ones.



6.2 DIGITAL INPUT COMMANDS

A function is assigned, through the configuration procedure to each IL1 and IL2 digital input. (see the parameters setting at tab 8 at pag 17). The configured function is activated when the digital input (free voltage contact or open collector output) is in the On state . It is deactivated by setting the input to the Off state. The activation of the function through the digital input has the highest priority than through the keyboard or through the serial communication.

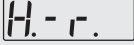Function		Parameter value	Performed operation  Off  On		Note
None			—	—	Not used
Set manual mode			Automatic	Manual	
Keypad lock			Unlock	Locked	With the keypad locked the commands from digital inputs and serial communication are still operating
PV measure hold			Normal operation	PV is hold	The value of PV is “frozen” at the time the digital input goes to the close state
Setpoint slopes inhibition			Rate limiting is active	Normal operation	When the input is in the on state, the Setpoint is changed in steps
Standard Setpoint	1st stored Setpoint		Local	1st SP	If more than one digital input is selecting a Setpoint, the last to be activated is the one operating.
	2nd stored Setpoint		Local	2nd SP	
	Remote Setpoint		Local	Remote	
Programmed Setpoint	Start/stop of a program			Hold/Run	The status (RUN/HOLD) changes every time the digital input switches from Off to On.

7 PROGRAMMED SETPOINT

INTRODUCTION

The controller supplied with the Setpoint programmer option (mod. M5-3... 1) offers, in alternative to the adaptive tuning, the functionality to define, store, display and execute a program consisting in the Setpoint profile in time.

MAIN CHARACTERISTICS

- 1 program, 16 segments/program
- start, stop, hold etc, commands from the keyboard
- time base in seconds, minutes or hours
- continuous or up to 1...9999 time cycling of the program
- 1 OP3 digital output with the state profile defined by the program
- setting of the maximum allowed deviation from the Setpoint

7.1 PROGRAM STRUCTURE


The program consists of a sequence of segments.

For each segment, it is specified:

- the Setpoint to reach SP_{i-1}
 - the duration of the segment t_{i-1}
 - the state of the OP3 output
- } always present

The program consists of:

- 1 initial segment named I
- 1 end segment named F
- 1...14 normal segments

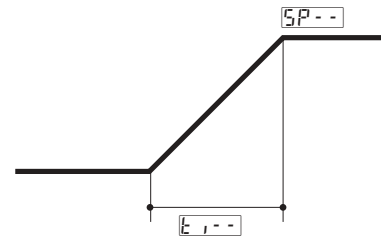

Initial segment




Its main purpose is to define the value the process variable has to maintain before starting the program.

End segment

Its main purpose is to define the value the process variable has to maintain at the end of the program and until further changes of Setpoint.


Normal segments

These segments build up the profile program. There are 3 types of segments:

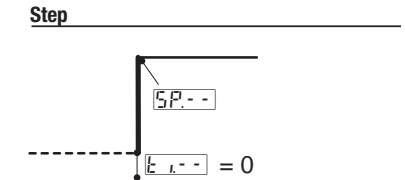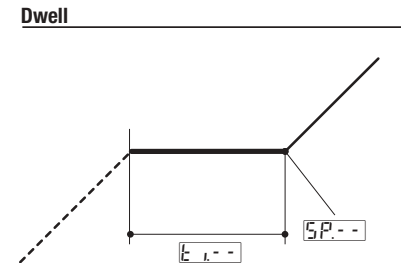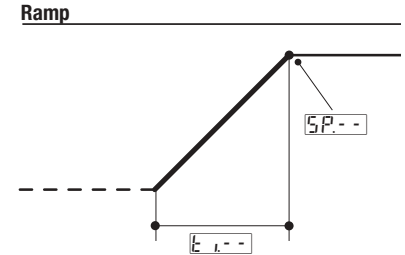

SP_i = Target setpoint
 t_{i-1} = Duration
 --- = Previous segment
 — = Current segment
 — = Next segment

EXAMPLE OF SETPOINT PROFILE

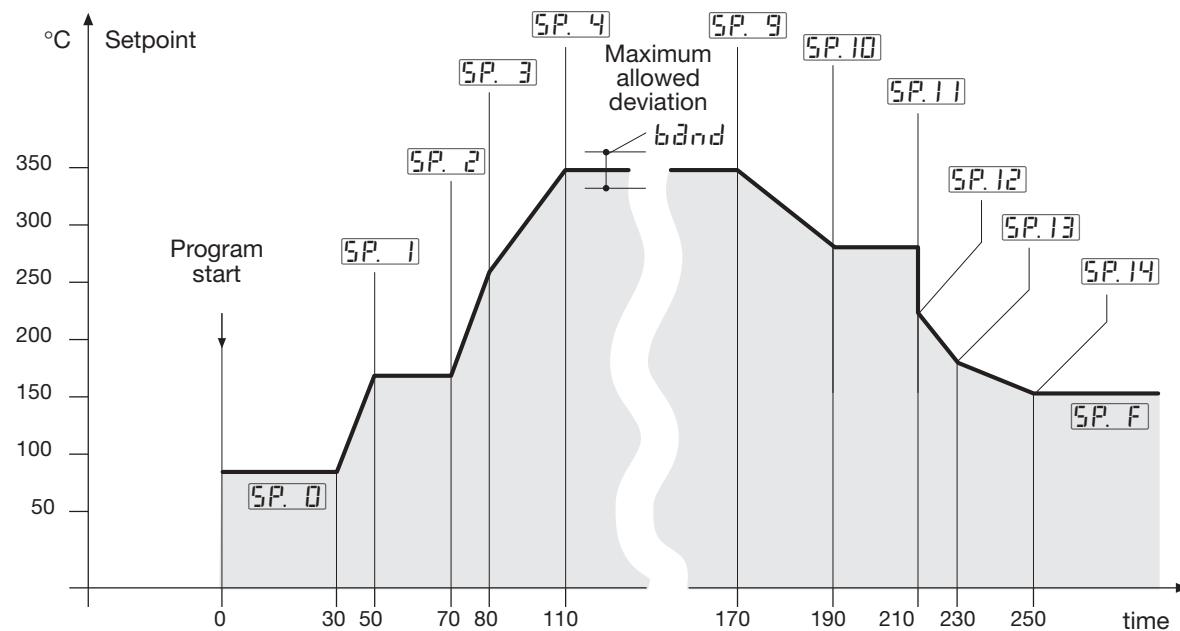

Segment	Initial	1°	2°	3°	4°	5°	9°	10°	11°/12°	13°	14°	End
Time	t0	t1	t2	t3	t4	t5	t9	t10	t11/t12	t13	t14	
OP3 Digital Output	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$	<input type="checkbox"/> $\overline{C10}$
	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}	<input type="checkbox"/> \overline{OPn}

The OP3 digital output state, during the segments, is defined in the program

☐ $\overline{C10}$ contact close (On)


☐ \overline{OPn} contact open (Off)

7.2 SETPOINT PROGRAMMER OPERATION


7.2.1 MAXIMUM ALLOWED DEVIATION (*band*)

If the PV controlled input value exceeds the band, centred around the SP, the segment time is extended of the same time the PV input stays out of the band. The band width is defined in a parameter of the program segment. The actual segment period is calculated as $t_{seg} + T_i$

A. Ramp

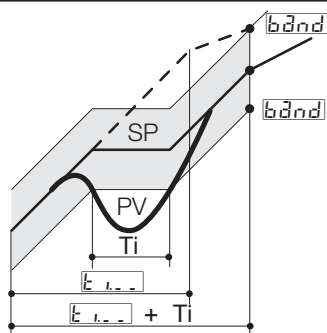

B. Dwell

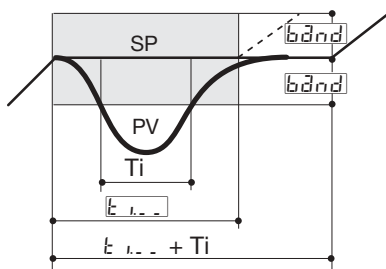

7.2.2 RE-START OF A PROGRAM AFTER A POWER FAILURE

The parameter *Fail* specifies the behaviour of the programmer at power up (see pag.37). Selected between the following 3 choices:


Cont Continue

res Reset

ramp Ramp

If **Cont** is selected, the execution of the program starts from the point reached at the power failure time.

All the parameters, like Setpoint and the remaining time are restored at the values they had at power off.

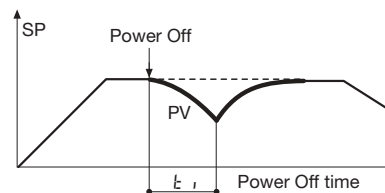


If **res** is selected, at power on the program ends and goes back to local mode.

If **ramp** is selected, the execution of the program starts from the point reached at the power failure time.


In this case, the programs continue with PV reaching SV with a ramp, whose slope corresponds to the one of the segment running at the power off.

The drawing below illustrates the situation.


Power off during a dwell

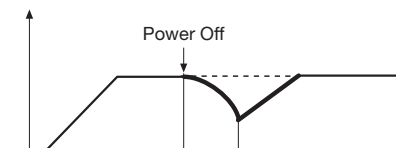

Power off during a ramp

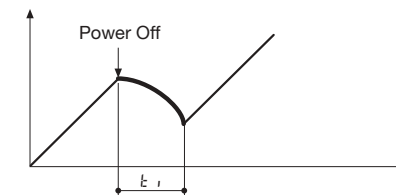

7.3 CREATION AND MODIFICATION OF A PROG.

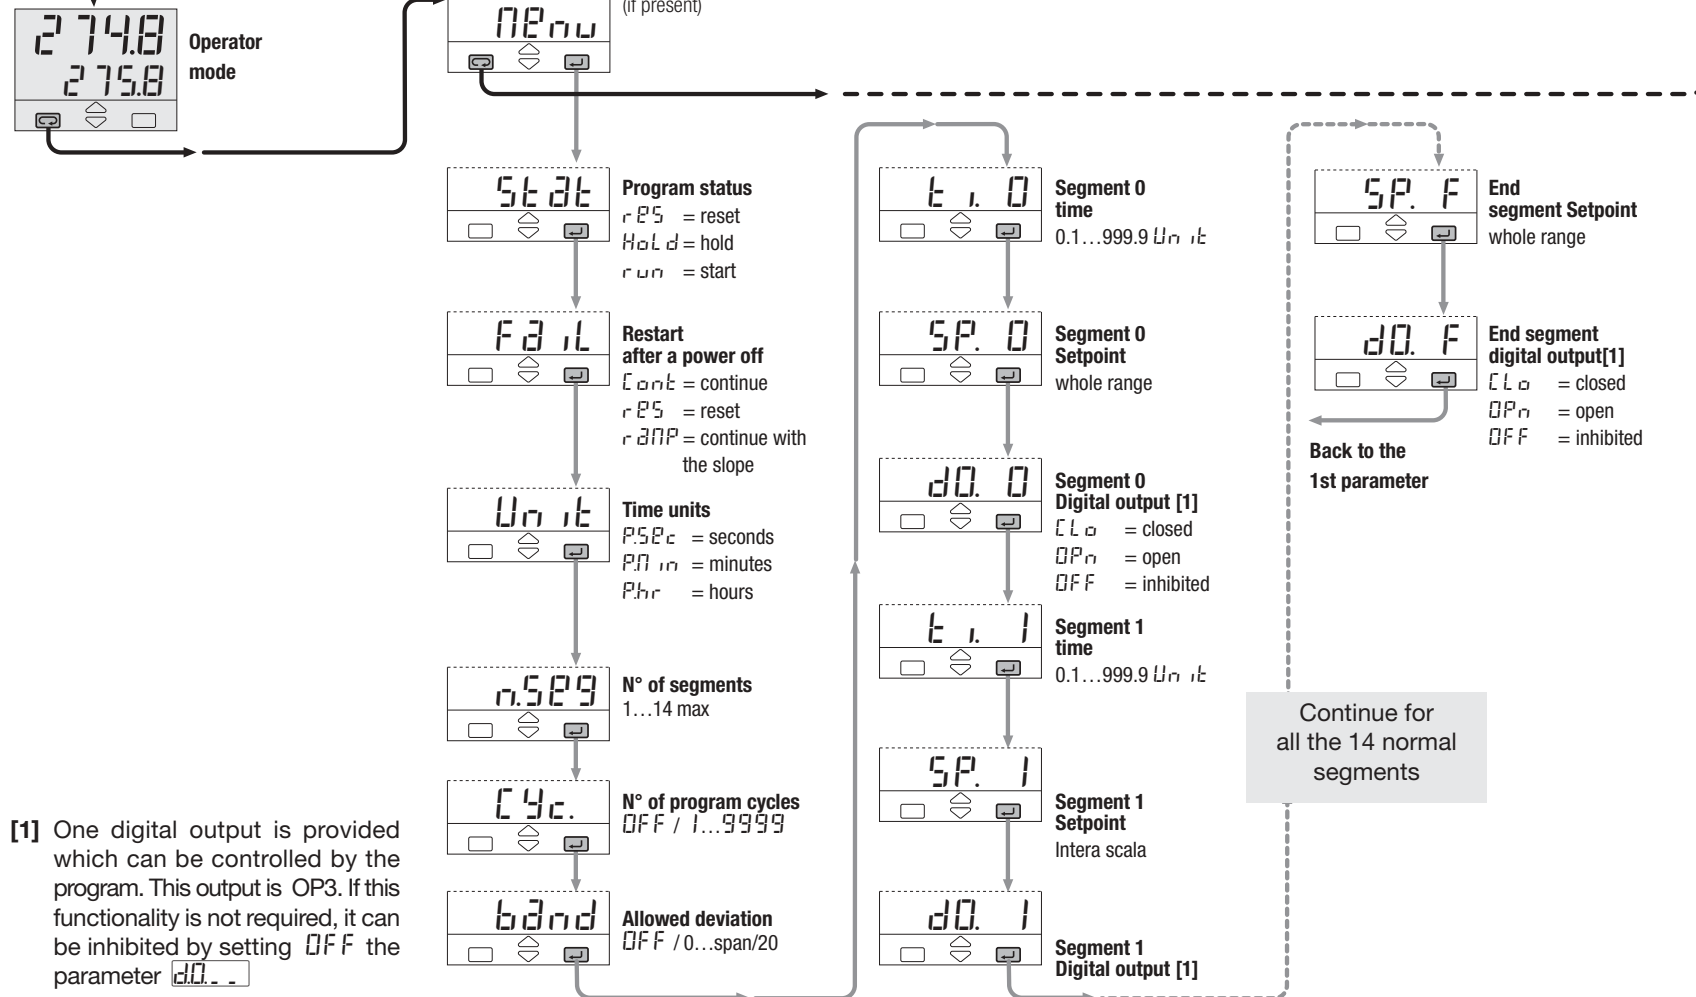


[1] One digital output is provided which can be controlled by the program. This output is OP3. If this functionality is not required, it can be inhibited by setting OFF the parameter dO..

7.4 START/STOP OF A PROGRAM

The various commands, supported by the controller, are different for each of the following operating phases:

- A) when in Local Setpoint mode
- B) during the execution of a program
- C) when the program is in hold

Commands supported by the controllers

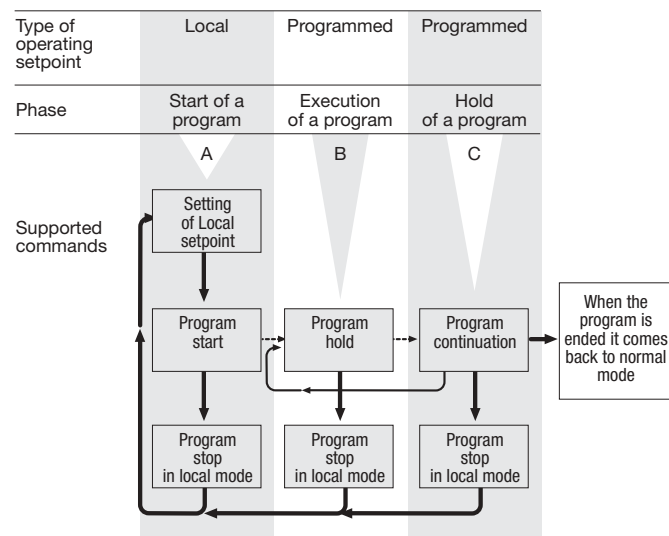


The different phase are displayed in a chained way, just for easing the understanding of the functionality.


Two different mode for starting and stopping a program are provided:

direct mode with the key
through the parameter menu

DIRECT MODE WITH

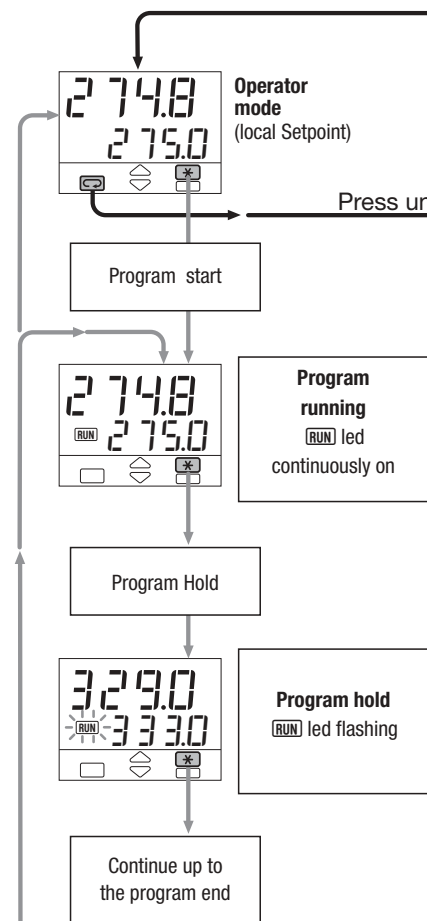

THROUGH THE PARAMETER MENU

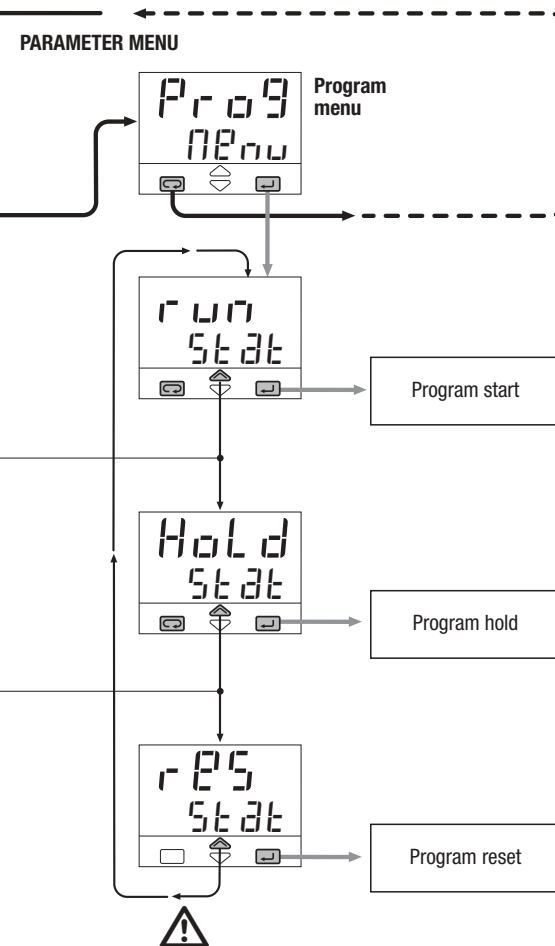

The green led is flashed at high rate when the controlled variable is out of the allowed deviation band
The current time of a segment is hold up to the time the variable re-enter in the band.

8 TECHNICAL SPECIFICATIONS

Features at 25 °C env. temp.	Description			
Total configurability	The choices are: input type, operating mode, type of control, safety strategies, alarm strategies			
Operating modes	1 loop with single/double output			
	1 loop as the latter with the addition of the Setpoint programmer			
Control mode	Algorithm	PID with overshoot control or On-off		
		PID with velocity algorithm, for controlling motorised positioners		
	Proportional band (P)	0.1...999.9%		
	Integral time (I)	1...9999 s	(user enabled/disabled)	PID control
	Derivative time (D)	0.1...999.9 s		
	Error band	0.1...10.0 digit		
	Manual reset	1...100% output	(user enabled/disabled)	Time proportioning control
	Cycle time	0.2...100.0 s		Discontinuous control
	Hysteresis	0.1...5.0%		ON-Off control
	Dead band	0.0...5.0%		Heat/Cool control
	Cool proportional band	0.1...999.9%		
	Cool Integral time	1...9999 s	(user enabled/disabled)	
	Cool Derivative time	0.1...999.9 s		
	Cool cycle time	0.2...100.0 s		
	Motor travel time	15...600 s		Motorised positioner
	Motor minimum step	0.1...5.0%		
	Feedback potentiometer	100Ω...10KΩ		
PV input (see table 1 page 18 for the signal ranges)	Common characteristics	A/D converter with resolution of 160.000 points Update measurement time: 50 ms Sampling time (max update time of the output) : 0.1...10.0 s configurable Input bias: - 60...+ 60 digit Input filter with enable/disable 0.1...999.9 s		
		Accuracy	0.25% ± 1 digits for temperature sensors 0.1% ± 1 digits (for mV and mA)	Between 100...240V~ the error is minimal

Features at 25 °C env. temp.	Description			
PV input	Resistance thermometer (for ΔT: R1+ R2 must be <320Ω)	Pt100Ω a 0°C (IEC 751) °C/°F selectable	2 or 3 wires or 2 Pt100 for ΔT	Max. wire res.: 20Ω (3 wires) Input drift 0.1°C/10°C Env. temperature <0.1°C/10Ω Wire Resistance
	Thermocouple	L,J,T,K,R,S (IEC 548) °C/°F selectable	Internal cold junction compensation	Max. wire res.: 150Ω Input drift <2μV/°C Env. temperature <5μV/10Ω Wire Resistance
	DC input (current)	0/4...20mA Rj = 30Ω	Engineering units Configurable decimal point position with or without √ Initial scale.: - 999...9999 Full scale.: -999...9999 (minimum range of 100 digits)	Input drift <0.1% / 20°C Env. Temp. <5μV / 10Ω Wire Res.
	DC input (voltage)	0...50 mV Rj = 10MΩ		
		1-5/0-5/0-10V Rj = 10KΩ		
Auxiliary inputs (options)	Remote Setpoint Not isolated accuracy 0.1 %	Current 0/4...20mA Rj = 30Ω	Bias in engineering units and ± range	
		Voltage 1-5/ 0-5/ 0-10V Rj = 300KΩ	Ratio from -9.99...+99.99	
				Local + Remote Setpoint
	CT current transformer	max span 50 or 100 mA hdw selectable	Display from 10 to 200 A resolution of 1A with alarm threshold (Heater break alarm)	
	Potentiometer	100Ω...10KΩ supply 300mV	Position feedback measurement	
Digital inputs	2 logic	The closure of the external contact produces any of the following actions:	Auto/Man mode change, Local/Remote Setpoint mode change, Stored Setpoints activation, keypad lock, measure hold and slopes inhibit. Start, stop, hold of a program (only with Setpoint programmer)	
Control output (cont.)	Single or double channel, direct or reverse action			
	Minimum limit	0...100.0% (OP1 heat)		
	Maximum limit	0...100.0% (OP1 heat), -100.0...0% (OP2 cool)		

Features at 25 °C env. temp.	Description					
Control output	Maximum slope	0.01...99.99%/s up and down				
	Safety value	-100...100% . (user enabled/disabled)				
	Time proportioning	Relays	NO 2A/250V~ resistive loads			
		Triac	1A/250V~ resistive loads			
		SSR drive	0...22V–, 20mA max (for static switches)			
	Analogue	Current	0/4...20mA max 750Ω/10V max		Galvanic insulation 500V~/1min. Resol.: 12 bit (0.025%) Accur. 0.1%. Short circuit protection	
		Voltage	0...1/5/10V 500Ω / 20mA max			
Motor positioner (3 states) Raise - Stop - Lower		Double action 2 poles NO, 2A/250V~ resistive load				
Alarms	SPST NO, 2A/250V~ resistive load Hysteresis 0.1...5.0% symmetrical					
	Actions	Active high	Action type	Deviation threshold	± range	
		Active low		Band width	0...range	
				Absolute threshold	Whole scale	
		Special functions	Heater Break detection			
			Loop Break Alarm			
			Activation inhibit (blocking)			
Acknowledge (latching)						
Related to the program (optional) (OP3)						
OP4 analogue output (optional)	Galvanic insulated: 500 V~/1min. Resolution: 12 bit (0.025%) Accuracy: 0.1% . Short circuit protected		Current 0/4...20mA 750Ω/10V max	Retransmission of PV or SP		
			Voltage 1-5/0-5/0-10V 500Ω/20mA max			
Setpoint	Ramp up and down, with slope in digit/s, digit/minute or digit/hour between 0.0...10.0% of the range High and low limits		Local plus 2 stored Setpoints			
			Only Remote			
			Local and Remote			
			Local with trim			
			Remote with trim			
			Time programmable (optional)			

Features at 25 °C env. temp.	Description	
Programmable Setpoint (optional)	1 program, 16 segments (1 initial and 1 end) From 1 to 9999 cycles or continuous cycling (FFF) Time values in seconds, minutes and hours Start, stop, hold, etc. activated from the keyboard, digital input and serial communications.	
Tuning	One shot Tune- step response method for calculating the PID terms parameters	
	Adaptive Tune self-learning, not intrusive, analysis of the process response to perturbations and continuously calculation of the PID parameters (not available with the Setpoint Programmer option)	
Auto/Manual station	Integrated in the controller, bumpless	
Serial com. (optional)	Operated from keyboard, digital input and serial communication.	
Auxil. supply	RS485 isolated, Modbus-Jbus, 1200, 2400, 4800, 9600, 19200 bit/s, 2 wires	
Auxil. supply	18V- ± 20%, 30mA max for transmitters (2, 3, 4 wires)	
Operational safety	Measure input	Detection of out of range, short circuit or sensor break with automatic activation of the safety strategies and alerts on display
	Control output	Safety value: -100...+100%. (user enabled/disabled)
	Parameters	Parameters and configuration data are stored in a non volatile memory for an unlimited time. They are organised in functionally homogeneous groups, like: visible and changeable, visible and not changeable, not visible.
	Access protection	Password to access the configuration data and the parameter protection menu
General characteristics	Supply	100 - 240V~ (- 15% + 10%) 50/60Hz or 24V~ (- 25% + 12%) 50/60Hz and 24V- (- 15% + 25%) power consumption 3W max
	Electric safety	Compliance to EN61010, installation class 2 (2500V) pollution class 2
	Electromagnetic compatibility	Compliance to the CE standards for industrial system and equipment
	UL and cUL Omologation	File E176452
	Protection EN650529	IP20 termination unit, IP65 front panel
	Dimensions	1 ¹ / ₁₆ DIN - 48 x 48, depth 150 mm, weight 230 g approx.

WARRANTY

We warrant that the products will be free from defects in material and workmanship for 3 years from the date of delivery. The warranty above shall not apply for any failure caused by the use of the product not in line with the instructions reported on this manual.

ASCON'S WORLDWIDE SALES NETWORK

SUBSIDIARY

FRANCE

ASCON FRANCE

Phone 0033 1 64 30 62 62

Fax 0033 1 64 30 84 98

AGENCE SUD-EST

Phone 0033 4 74 27 82 81

Fax 0033 4 74 27 81 71

AGENCE RÉGION-EST

Phone 0033 3 89 76 99 89

Fax 0033 3 89 76 87 03

DISTRIBUTORS

ARGENTINA

MEDITECNA S.R.L.

Phone +5411 4585 7005

Fax +5411 4585 3437

AUSTRALIA

IPA INDUSTRIAL PYROMETER

(Aust) PTY.LTD

Phone +61 8 8352 3688

Fax +61 8 8352 2873

FINLAND & ESTONIA

TIM-TOOL OY

Phone +358 50 501 2000

Fax +358 9 50 55 144

GERMANY

MESA INDUSTRIE ELEKTRONIK GMBH

Phone +49 2365 915 220

Fax +49 2365 915 225

GREECE

CONTROL SYSTEM

Phone +30 23 10 521 055-6

Fax +30 23 10 515 495

BRANCH OFFICE

Phone +30 1 646 6276

Fax +30 1 646 6862

HOLLAND

TEMPCONTROL I.E.P. B.V.

Phone +31 70 347 64 31

Fax +31 70 38 22 55 16

PORTUGAL

REGUIPAMENTOS LDA

Phone +351 21 989 0738

Fax +351 21 989 0739

SPAIN

INTERBIL S.L.

Phone +34 94 453 50 78

Fax +34 94 453 51 45

BRANCH OFFICES

Phone +34 93 311 98 11

Fax +34 93 311 93 65

Phone +34 91 656 04 71

Fax +34 91 656 04 71

SWITZERLAND

CONTROLTHERM GMBH

Phone +41 1 954 37 77

Fax +41 1 954 37 78

TURKEY

KONTROL SISTEMLERI LTD

Phone +90 216 527 96 15

Fax +90 216 527 96 20

UNITED KINGDOM

EUKERO CONTROLS LTD

Phone +44 20 8568 4664

Fax +44 20 8568 4115