

Heat/Cool
Temperature Controller
1/4 DIN – 96 x 96
Q1 line

Quick Guide • QG Q1 - 1/11.09 • Cod. J30-478-1AQ1 QG



via Indipendenza 56, 27029 - Vigevano (PV)
Tel.: +39 0381 698 71, Fax: +39 0381 698 730
internet site: www.ascontecnologic.com
E-mail: sales@ascontecnologic.com

Model Code

The product code indicates the specific hardware configuration of the instrument, that can be modified by specialized engineers only.

Line	Basic	Accessories	Configuration 1st part	2nd part
Model:	Q1	A B C D	E 9 0 0	I L M N - O P Q R

Line	Q	1
Power supply	A	
100...240Vac (-15...+10%)		3
24Vac (-25...+12%) or 24Vdc (-15....+25%)		5

Outputs OP1 – OP3	B
Relay – Relay	1
Relay – Triac	9

Serial Communications	C
None	0
RS485 Modbus/Jbus SLAVE	5

Options	D
None	0
Analogue output + Remote Setpoint	5

Setpoint Programmer – special function	E
Not fitted	0
Start-up + Timer	2

Declaration of conformity and manual retrival

Class II instrument, rear panel mounting. This controller has been designed with compliance to the European Directives. Consult Declaration of Conformity for further details on Directives and Standards used for Compliance. Declaration of Conformity can be found in the file **ASCON_DC_G2.zip**.

All information about the controller usage are inserted in the user manual (**ASCON_MIU_Q1_EN.zip**).

The Declaration of Conformity and the manual of the controller can be downloaded (free of charge) from the web-site:

www.ascontecnologic.com

Once connected to the web-site, click on the **ascon** logo.

Select: **Download/Documentation**, and fill the table with:

- Typology: **Manual**; Type: **A11**; Language: **A11**;
Code: **GAMMA2**

Click: **SEARCH** and

- Download the file: **ASCON_DC_G2.zip** (Declaration of Conformity of gamma2 controllers)
ASCON_MIU_Q1_EN.zip (Q1 manual)

Warning!

- Whenever a failure or a malfunction of the device may cause dangerous situations for persons, things or animals, please remember that the plant must be equipped with additional devices which will guarantee safety.
- We warrant that the products will be free from defects in material and workmanship for 18 months from the date of delivery. Products and components that are subject to wear due to conditions of use, service life, and misuse are not covered by this warranty.

Configuration Code


A 4 + 4 digits index code follows the model (letters from I... R). This code must be set to configure the controller. Using UP (⤴) and DOWN (⤵) keys insert the desired configuration code. When not configured the 1st part of the code is 9999.

Input type and range			I	L
TR Pt100 IEC751	-99.9...300.0°C	-99.9...572.0°F	0	0
TR Pt100 IEC751	-200...600°C	-328...1112°F	0	1
TC L Fe-Const DIN43710	0...600°C	32...1112°F	0	2
TC J Fe-Cu45% Ni IEC584	0...600°C	32...1112°F	0	3
TC T Cu-CuNi	-200 ...400°C	-328...752°F	0	4
TC K Chromel-Alumel IEC584	0...1200°C	32...2192°F	0	5
TC S Pto10%Rh-Pt IEC584	0...1600°C	32...2912°F	0	6
TC R Ptt3%Rh-Pt IEC584	0...1600°C	32...2912°F	0	7
TC B Pt30%Rh Pt6%Rh IEC584	0...1800°C	32...3272°F	0	8
TC N Nichrosil-Nisil IEC584	0...1200°C	32...2192°F	0	9
TC E Ni10%Cr-CuNi IEC584	0...600°C	32...1112°F	1	0
TC Ni-NiMo18%	0...1100°C	32...2012°F	1	1
TC W3%Re-W25%Re	0...2000°C	32...3632°F	1	2
TC W5%Re-W26%Re	0...2000°C	32...3632°F	1	3
Dc input 0...50mV linear	Engineering and units		1	4
Dc input 10...50mV linear	Engineering and units		1	5
Custom input and range [1]			1	6


[1] For instance, other thermocouples types, ΔT (with 2 Pt100), custom linearisation etc.

Description and dimensions


Depth: 110 mm

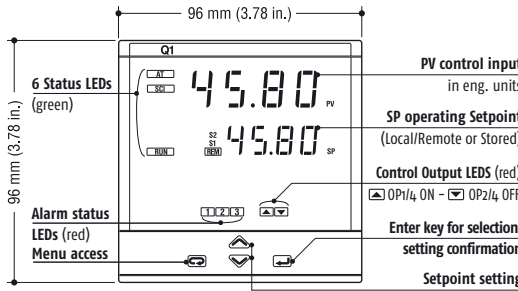

Panel cut out and mounting

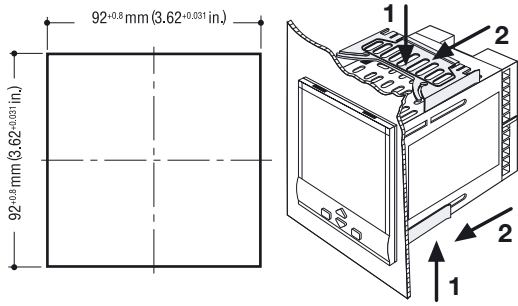

Electrical connections

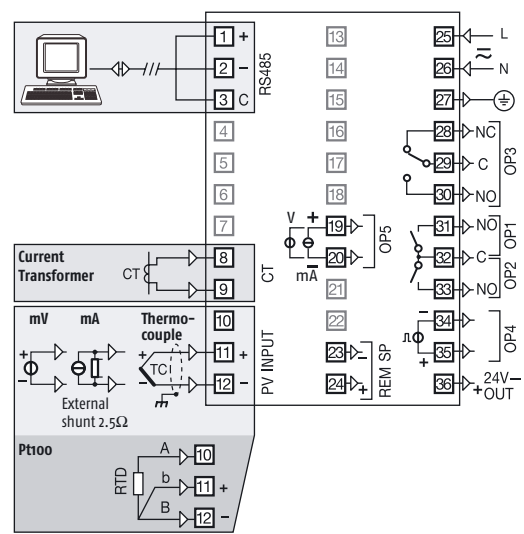

Terminals

Pin connector Ø 1.4 mm - 0.055 in. max.	Fork-shape AMP165004 Ø 5.5 mm - 0.21 in.	Stripped wire L 5.5 mm - 0.21 in.
---	--	---

Control mode	M
ON-OFF reverse action	0
ON-OFF direct action	1
PID single reverse action	2
PID single direct action	3
PID double action	4
	5
	6
	7

[2] 2 different correcting methods of the control output are available. One for water and the other for oil:
OP water=100•(OP2/100)2 – OP oil=100•(OP2/100)1.5

Output Configuration		N
Single action	Double action	
Relay (OP1)	Heat OP1, Cool OP2	0
SSR drive or relay (OP4)	Heat OP1, Cool OP4	1
–	Heat OP4, Cool OP2	2

Alarms 1, 2 and 3 type and function		O	P	Q
Disabled (or, only for alarm AL3, used by Timer)		0	0	0
Sensor break/Loop break alarm (LBA)		1	1	1
Absolute	active high	2	2	2
	active low	3	3	3
Deviation	active high	4	4	4
	active low	5	5	5
Band	active out	6	6	6
	active in	7	7	7
Heater break by CT [3]	active during ON output state	8	8	8
	active during OFF output state	9	9	9

[3] Only possible whether "Output configuration" **N** = 0 or 1 and **H.E.F.5** is **NOT** set to OFF

Setpoint type	R
Local only	0
Local and 2 tracking stored Setpoints	1
Local and 2 Stand-by stored Setpoints	2
Local and Remote (only if option is installed)	3
Local with trim (only with remote Setpoint)	4
Remote with trim (only if option is installed)	5


Controller configuration chart

The present chart includes only the basic parameters

For the list and the description of all the controller parameters see the User Manual.

When the controller is new and not configured shows the code 9999 at power ON. In this case NO PASSWORD is needed to configure the instrument (see the grey box in the chart below). Enter the configuration code in accordance with the desired functional characteristics.

Warning! If the parameter **CodeP** has previously set to a value ≥ 5000 , (for example **5033** in the chart) the controller is locked in operator mode; insert the correct password to access both the parameter and the configuration menus.

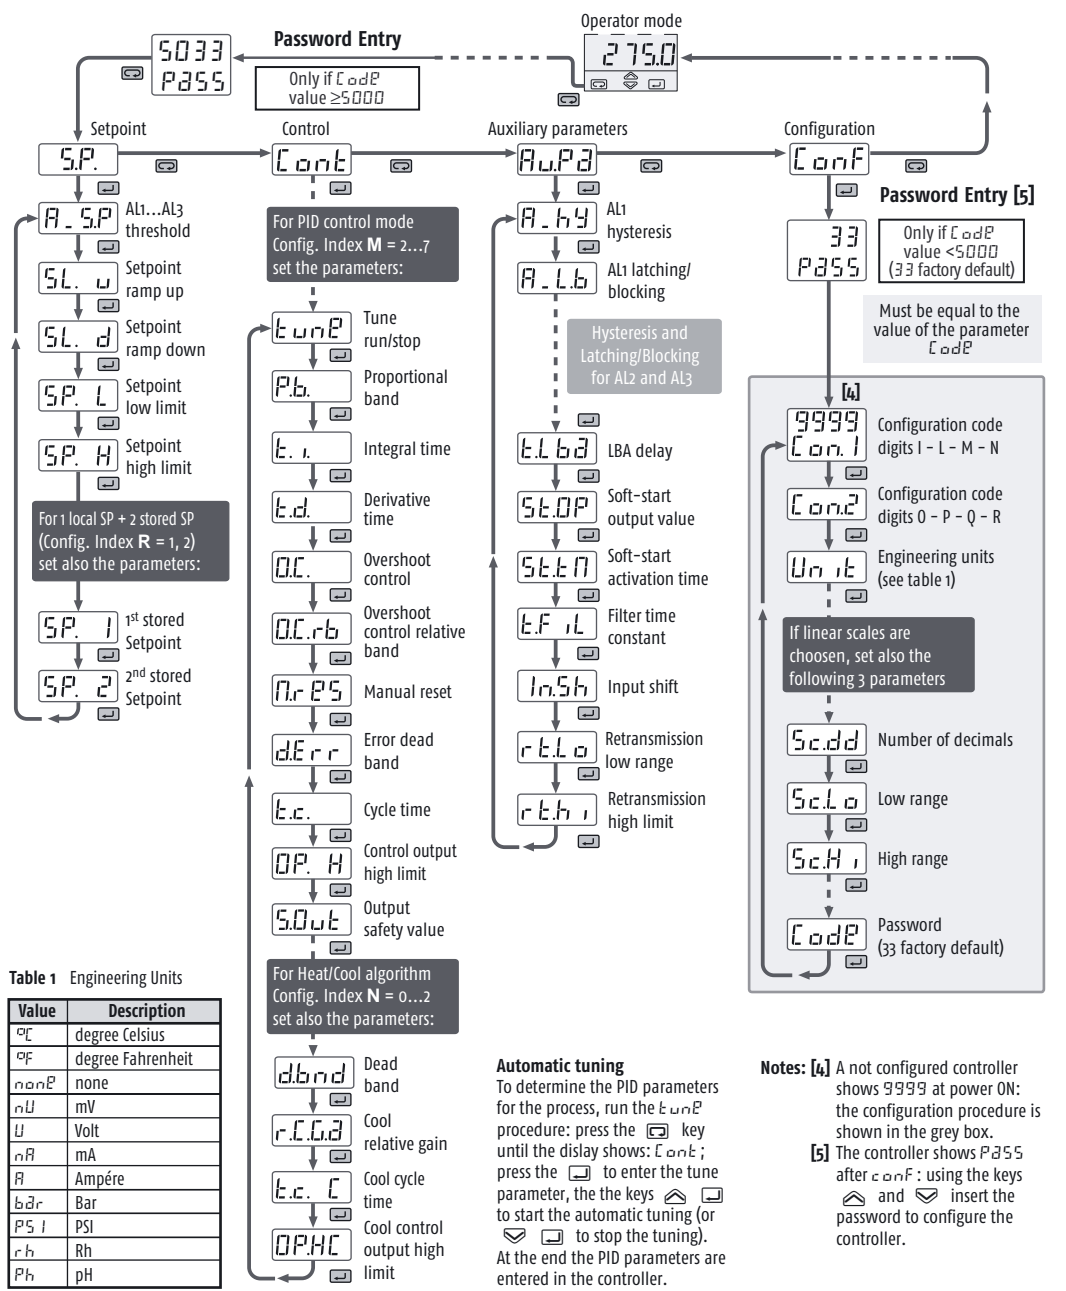

Value	Description
°C	degree Celsius
°F	degree Fahrenheit
none	none
mV	mV
V	Volt
mA	mA
A	Ampère
bar	Bar
PSI	PSI
Rh	Rh
pH	pH

Automatic tuning
To determine the PID parameters for the process, run the **tuneP** procedure: press the **tune** key until the display shows: **CodeT**; press the **tune** key to enter the tune parameter, the keys **up** and **down** to start the automatic tuning (or **stop** to stop the tuning). At the end the PID parameters are entered in the controller.

Notes: [4] A not configured controller shows 9999 at power ON: the configuration procedure is shown in the grey box.
[5] The controller shows **Pass5** after **CodeN**: using the keys **up** and **down** insert the password to configure the controller.

Parameter list

The parameters pointed out with grey background are those necessary to configure the options and are NOT shown in the configuration chart. All the parameters are fully described and explained in the user manual of the controller.

Code	Parameter Name	Value	
		Default	User
Con.1	1st Configuration code	9999	
Con.2	2nd Configuration code	0000	
Units	Engineering units	NONE	
Sc.dec	Decimal point	0	
Sc.lo	Low range for engineering units	0	
Sc.hi	High range for engineering units	9999	
rS.in	Remote Setpoint input range	4...20	
H.E.F.5	Current transformer range	OFF	
Prot	Communications protocol	MBUS	
baud	Baud rate	9600	
rOP.r	Continuous Output range	4...20	
rEH	Retransmitted signal selection	PV	
CodeP	Password	33	
L.r	Local/Remote Setpoint Selection	LOCAL	
SEL	Stored Setpoint Selection	NONE	
AL1P	AL1 alarm threshold	0	
AL2P	AL2 alarm threshold	0	
AL3P	AL3 alarm threshold	0	
SL.u	Slope up	OFF	
SL.d	Slope down	OFF	
SP.L	Setpoint low limit	PV.LO	
SP.H	Setpoint high limit	PV.HI	
SP.1	1st stored Setpoint	0	
SP.2	2nd stored Setpoint	0	
rLo	Ratio remote Setpoint	1.00	
b.rS	Bias Remote Setpoint	0	
hy	Control output hysteresis	0.5	
tunP	Start/Stop One shot tuning (0=Stop 1=Run)	STOP	
Pb	Proportional band (Hysteresis ON – OFF)	5.0	
t.i	Integral time	5.0	
t.d	Derivative time	1.00	

Code	Parameter Name	Value	
		Default	User
OC	Overshoot Control	1.0	
OC.r.b	Overshoot Control relative band	0.5	
Mr.RS	Manual reset	50	
dErr	Error Dead Band	OFF	
tc	Output Cycle time	20	
OP.H	Control output high limit	100.0	
SOut	Output safety value	0	
dbnd	Heat/Cool Dead band	0.5	
rEG	Relative Cooling Gain	1.0	
hy.C	Cool output Hysteresis	0.5	
tc.C	Cool cycle time	20	
OP.HC	Cool output maximum value	100.0	
AL1hy	AL1 Alarm Hysteresis	0.5	
AL1Lb	AL1 latching and blocking functions	NONE	
AL2hy	AL2 Alarm Hysteresis	0.5	
AL2Lb	AL2 latching and blocking functions	NONE	
AL3hy	AL3 Alarm Hysteresis	0.5	
AL3Lb	AL3 latching and blocking functions	NONE	
tLb.d	LBA delay	OFF	
StOP	Soft start output high value	0.5	
St.tn	Soft start time	1	
EF.i	Input filter	OFF	
InSh	Input shift	OFF	
Addr	Serial communications address	247	
rELo	Retransmission low range	PV.LO	
rEH	Retransmission high range	PV.HI	
tMod	Timer/Start-up operating mode	OFF	
tAct	Timer Action	OFF	
t.r	Timer Setting	0.5	
SP.Sb	Stand-by Setpoint	0	
t.h.SU	Hold time	1	
SP.SU	Start-Up Setpoint	0	
OP.HS	Output high limit during Start-up	100.0	