

Heat/Cool
Temperature Controller
1/8 DIN – 48 x 96
X1 line

Quick Guide • QG X1 – 1/11.09 • Cod. J30-478-1AX1 QG



**ASCON
TECNOLOGIC**
via Indipendenza 56, 27029 – Vigevano (PV)
Tel.: +39 0381 698 71, Fax: +39 0381 698 730
internet site: www.ascontecnologic.com
E-mail: sales@ascontecnologic.com

Model Code

The product code indicates the specific hardware configuration of the instrument, that can be modified by specialized engineers only.

Model:	Line		Basic		Accessories		Configuration	
							1 st part	2 nd part
	X1		A B C D		- E 9 0 0		/ I L M N	- O P Q R
Line	X		1					
Power supply			A					
100...240Vac (~15...+10%)			3					
24Vac (~25...+12%) or 24Vdc (~15....+25%)			5					
Outputs OP1 – OP3			B					
Relay – Relay			1					
Relay – Triac			9					
Serial Communications			C					
None			0					
RS485 Modbus/Jbus SLAVE			5					
Options			D					
None			0					
Analogue output + Remote Setpoint			5					
Setpoint Programmer – special function			E					
Not fitted			0					
Start-up + Timer			2					

Controller configuration chart

The present chart includes only the basic parameters

For the list and the description of all the controller parameters see the User Manual.

When the controller is new and not configured shows the code 9999 at power ON. In this case NO PASSWORD is needed to configure the instrument (see the grey box in the chart below). Enter the configuration code in accordance with the desired functional characteristics.

Warning! If the parameter CodP has previously set to a value ≥ 5000 , (for example 5033 in the chart) the controller is locked in operator mode; insert the correct password to access both the parameter and the configuration menus.

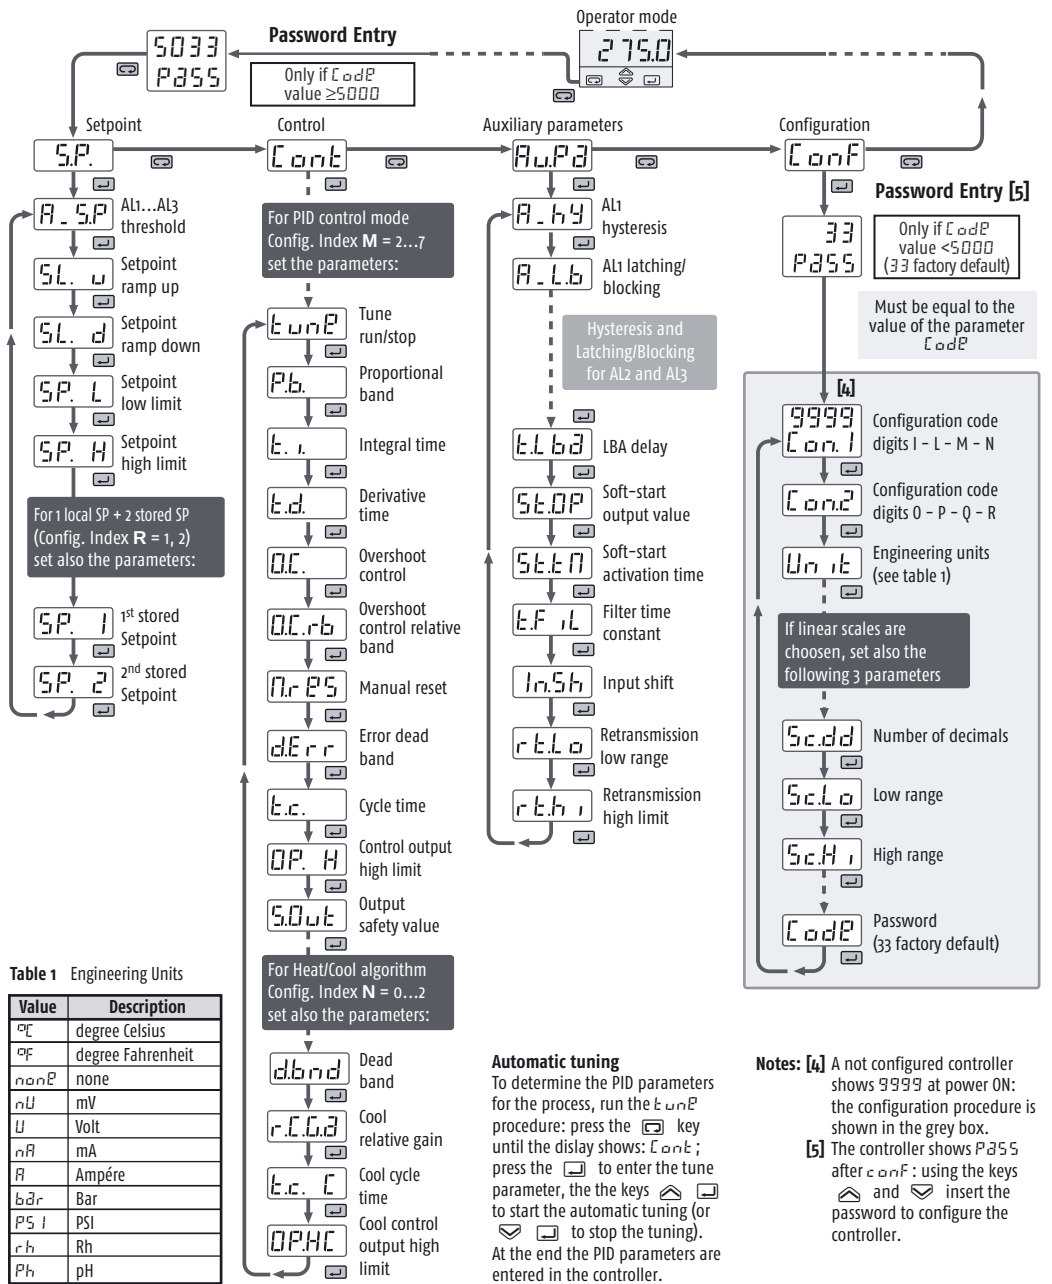


Table 1 Engineering Units	
Value	Description
°C	degree Celsius
°F	degree Fahrenheit
none	none
mV	mV
V	Volt
mA	mA
A	Ampère
bar	Bar
PSI	PSI
Rh	Rh
pH	pH

Declaration of conformity and manual retrival

Class II instrument, rear panel mounting. This controller has been designed with compliance to the European Directives. Consult Declaration of Conformity for further details on Directives and Standards used for Compliance. Declaration of Conformity can be found in the file **ASCON_DC_G2.zip**.

All information about the controller usage are inserted in the user manual (**ASCON_MIU_X1_EN.zip**).

The Declaration of Conformity and the manual of the controller can be downloaded (free of charge) from the web-site:

www.ascontecnologic.com

Once connected to the web-site, click on the **ascon** logo.

Select: **Download/Documentation**, and fill the table with:

- Typology: **Manual1**; Type: **A11**; Language: **A11**;
- Code: **GAMMA2**

Click: **SEARCH** and

- Download the file: **ASCON_DC_G2.zip** (Declaration of Conformity of gamma2 controllers)
- ASCON_MIU_X1_EN.zip** (X1 manual)

Warning!

- Whenever a failure or a malfunction of the device may cause dangerous situations for persons, things or animals, please remember that the plant must be equipped with additional devices which will guarantee safety.
- We warrant that the products will be free from defects in material and workmanship for 18 months from the date of delivery. Products and components that are subject to wear due to conditions of use, service life, and misuse are not covered by this warranty.

Configuration Code


A 4 + 4 digits index code follows the model (letters from I... R). This code must be set to configure the controller. Using UP (▲) and DOWN (▼) keys insert the desired configuration code. When not configured the 1st part of the code is 9999.

Input type and range		I	L
TR Pt100 IEC751	~99.9...300.0°C	~99.9...572.0°F	0 0
TR Pt100 IEC751	~200...600°C	~328...1112°F	0 1
TC L Fe-Const DIN43710	0...600°C	32...1112°F	0 2
TC J Fe-Cu45% Ni IEC584	0...600°C	32...1112°F	0 3
TC T Cu-CuNi	~200 ...400°C	~328...752°F	0 4
TC K Chromel-Alumel IEC584	0...1200°C	32...2192°F	0 5
TC S Pt100%Rh-Pt IEC584	0...1600°C	32...2912°F	0 6
TC R Pt13%Rh-Pt IEC584	0...1600°C	32...2912°F	0 7
TC B Pt30%Rh Pt6%Rh IEC584	0...1800°C	32...3272°F	0 8
TC N Nichrosil-Nisil IEC584	0...1200°C	32...2192°F	0 9
TC E Ni10%Cr-CuNi IEC584	0...600°C	32...1112°F	1 0
TC Ni-NiMo18%	0...1100°C	32...2012°F	1 1
TC W3%Re-W25%Re	0...2000°C	32...3632°F	1 2
TC W5%Re-W26%Re	0...2000°C	32...3632°F	1 3
Dc input 0...50mV linear	Engineering and units		1 4
Dc input 10...50mV linear	Engineering and units		1 5
Custom input and range [1]			1 6


[1] For instance, other thermocouples types, ΔT (with 2 Pt100), custom linearisation etc.

Description and dimensions

Depth: 110 mm

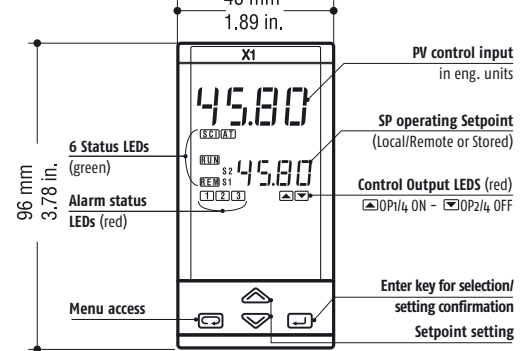

Panel cut out and mounting

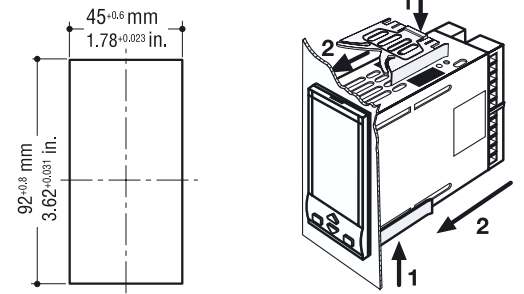


Control mode		M
ON-OFF reverse action		0
ON-OFF direct action		1
PID single reverse action		2
PID single direct action		3
PID double action	Linear cool output	4
	ON-OFF cool output	5
	Water cool output [2]	6
	Oil cool output [2]	7

[2] 2 different correcting methods of the control output are available. One for water and the other for oil:
OP water=100•(OP2/100)2 – OP oil=100•(OP2/100)1.5

Output Configuration		N
Single action	Double action	
Relay (OP1)	Heat OP1, Cool OP2	0
SSR drive or relay (OP4)	Heat OP1, Cool OP4	1
-	Heat OP4, Cool OP2	2

Electrical connections

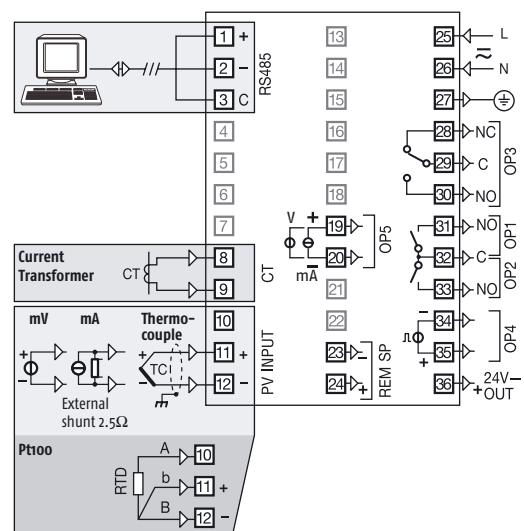

Terminals

Pin connector Ø 1.4 mm – 0.055 in. max.	Fork-shape AMP165004 Ø 5.5 mm – 0.21 in.	Stripped wire L 5.5 mm – 0.21 in.
---	--	---

Alarms 1, 2 and 3 type and function		O	P	Q
Disabled (or, only for alarm AL3, used by Timer)		0	0	0
Sensor break/Loop break alarm (LBA)		1	1	1
Absolute	active high	2	2	2
	active low	3	3	3
Deviation	active high	4	4	4
	active low	5	5	5
Band	active out	6	6	6
	active in	7	7	7
Heater break by CT [3]	active during ON output state	8	8	8
	active during OFF output state	9	9	9

[3] Only possible whether "Output configuration"

[N] = 0 or 1 and H.E.F.S is NOT set to OFF

Setpoint type	R
Local only	0
Local and 2 tracking stored Setpoints	1
Local and 2 Stand-by stored Setpoints	2
Local and Remote (only if option is installed)	3
Local with trim (only with remote Setpoint)	4
Remote with trim (only if option is installed)	5

Parameter list

The parameters pointed out with grey background are those necessary to configure the options and are NOT shown in the "Controller Configuration Chart". All the parameters are fully described and explained in the user manual of the controller.

Code	Parameter Name	Value	
		Default	User
Con.1	1 st Configuration code	9999	
Con.2	2 nd Configuration code	0000	
Unit	Engineering units	NONE	
Scdd	Decimal point	0	
Sclo	Low range for engineering units	0	
ScH	High range for engineering units	9999	
rS.In	Remote Setpoint input range	4... 20	
H.E.F.S	Current transformer range	OFF	
Prab	Communications protocol	JBUS	
Baud	Baud rate	9600	
rPlr	Continuous Output range	4... 20	
rEH	Retransmitted signal selection	PV	
CodP	Password	33	
Run	Start/Stop Timer	STOP	
Lrr	Local/Remote Setpoint Selection	LOCAL	
SEL	Stored Setpoint Selection	NONE	
AlSP	AL1 alarm threshold	0	
AlSP	AL2 alarm threshold	0	
AlSP	AL3 alarm threshold	0	
SLu	Slope up	OFF	
SLd	Slope down	OFF	
SP.L	Setpoint low limit	PV.LO	
SP.H	Setpoint high limit	PV.HI	
SP.1	1 st stored Setpoint	0	
SP.2	2 nd stored Setpoint	0	
rLo	Ratio remote Setpoint	1.00	
bSPS	Bias Remote Setpoint	0	
hY	Control output hysteresis	0.5	
tunP	Start/Stop One shot tuning (0=Stop 1=Run)	STOP	
Pb	Proportional band (Hysteresis ON – OFF)	5.0	
t.i	Integral time	5.0	
t.d	Derivative time	1.00	

Code	Parameter Name	Value	
		Default	User
OC	Overshoot Control	1.00	
OCrb	Overshoot Control relative band	0.5	
PrPS	Manual reset	50.0	
dErr	Error Dead Band	OFF	
t.c.	Output Cycle time	20	
OP.H	Control output high limit	100.0	
SOut	Output safety value	0.0	
dbnd	Heat/Cool Dead band	0.5	
r.CGB	Relative Cooling Gain	1.0	
hY.C	Cool output Hysteresis	0.5	
t.c.C	Cool cycle time	20	
OPHC	Cool output maximum value	100.0	
AlhY	AL1 Alarm Hysteresis	0.5	
AlLb	AL1 latching and blocking functions	NONE	
AlhY	AL2 Alarm Hysteresis	0.5	
AlLb	AL2 latching and blocking functions	NONE	
AlhY	AL3 Alarm Hysteresis	0.5	
AlLb	AL3 latching and blocking functions	NONE	
t.LbD	LBA delay	OFF	
StOP	Soft start output high value	0.5	
StEN	Soft start time	1	
EF.i	Input filter	OFF	
lnSh	Input shift	OFF	
Addr	Serial communications address	1	
rELo	Retransmission low range	PV.LO	
rEH	Retransmission high range	PV.HI	
tMod	Timer/Start-up operating mode	OFF	
tAct	Timer Action	OFF	
t.P	Timer Setting	0.5	
SPSB	Stand-by Setpoint	0	
t.hSU	Hold time	1	
SPSU	Start-Up Setpoint	0	
OPHS	Output high limit during Start-up	100.0	

Notes: [4] A not configured controller shows 9999 at power ON: the configuration procedure is shown in the grey box.

[5] The controller shows PASS after CONF: using the keys ▲ and ▼ insert the password to configure the controller.

Automatic tuning

To determine the PID parameters for the process, run the $tunP$ procedure: press the tunP key until the display shows: $Cont$; press the tunP key to enter the tune parameter, the keys tunP to start the automatic tuning (or tunP to stop the tuning). At the end the PID parameters are entered in the controller.